


INSTALLATION INSTRUCTIONS

Front Brush Guard: for Polaris Ranger[®] 900

Winch, LED lights, and Snow Plow Mount shown in instructions
are optional and are *not included* with FBG-P-RAN900

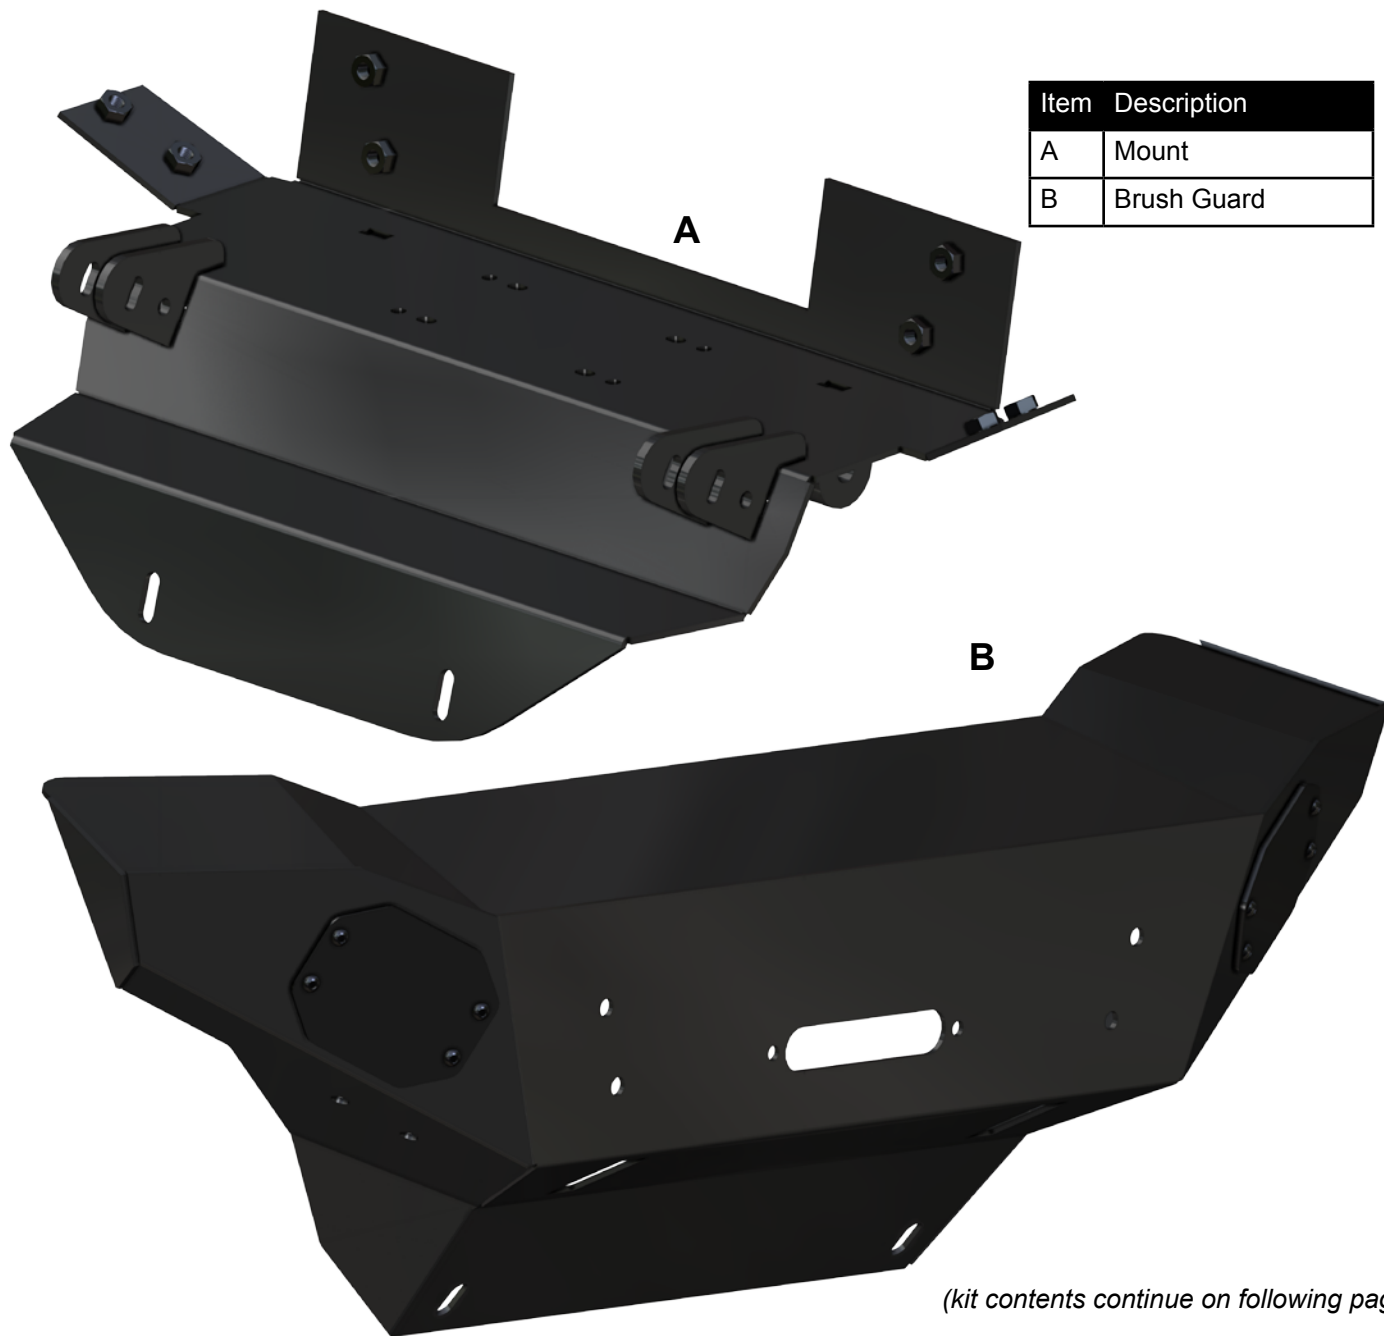

(kit contents continue on following page)

Need help with your installation?



sales@superatv.com



www.superatv.com



1-855-743-3427



8:00am - 9:00pm EST M-Th
8:00am - 7:00pm EST Friday
9:00am - 2:00pm EST Saturday

Read instructions and view illustrations before beginning.

Thank You





For Choosing

SUPERATV.COM[®]

(kit contents continued)




Item	Description
C	LED Bracket, Right
D	LED Bracket, Left
E	Supports
F	D-Rings
G*	Fairlead Adapter

**use with 3500 Lbs. Winch*

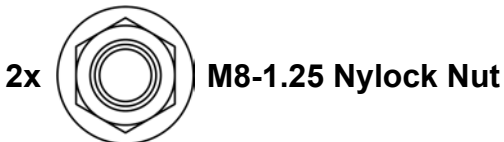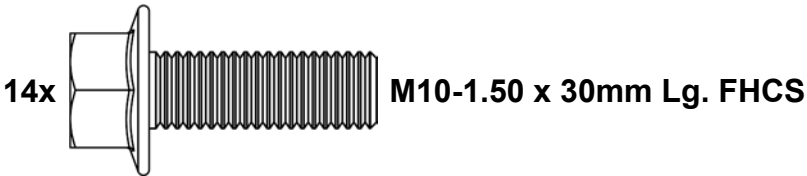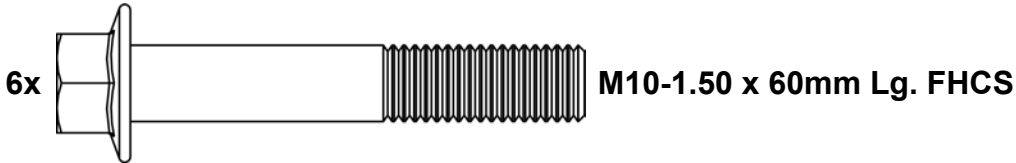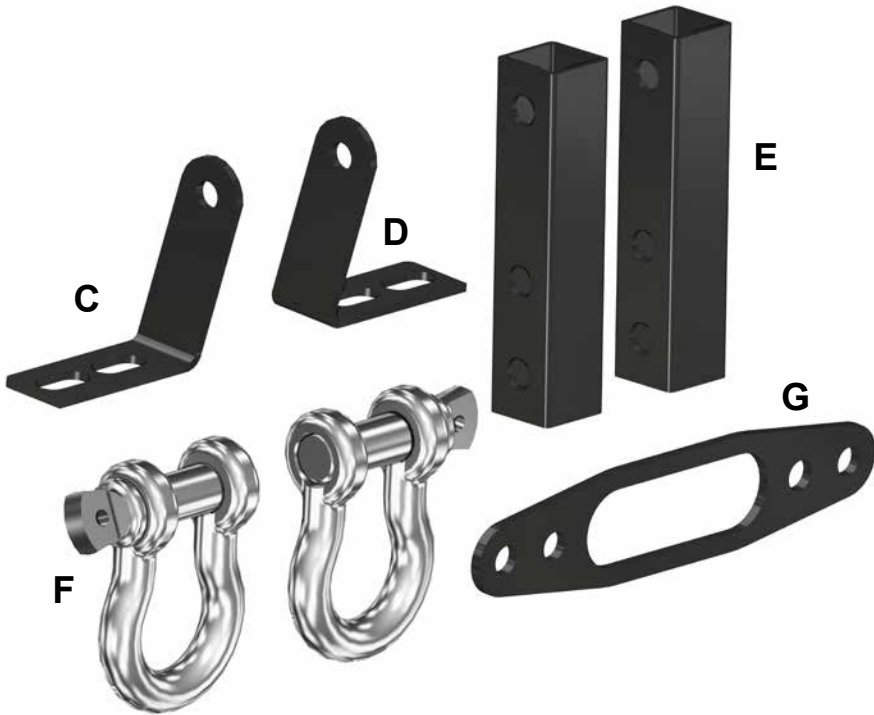


(disregard any extra hardware)


Remove stock Bumper from machine
keep all components removed from machine

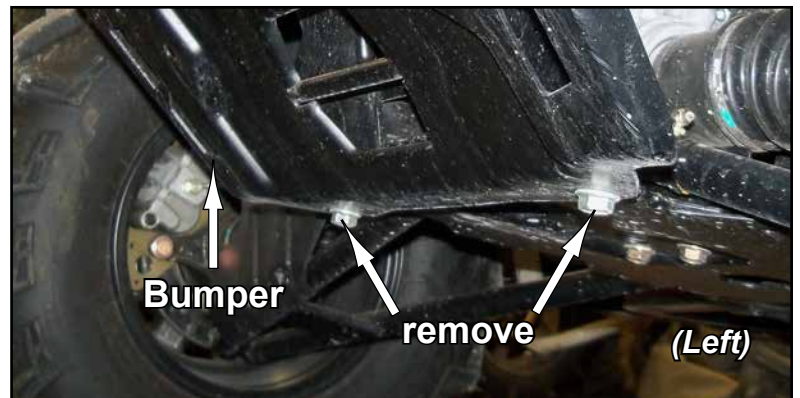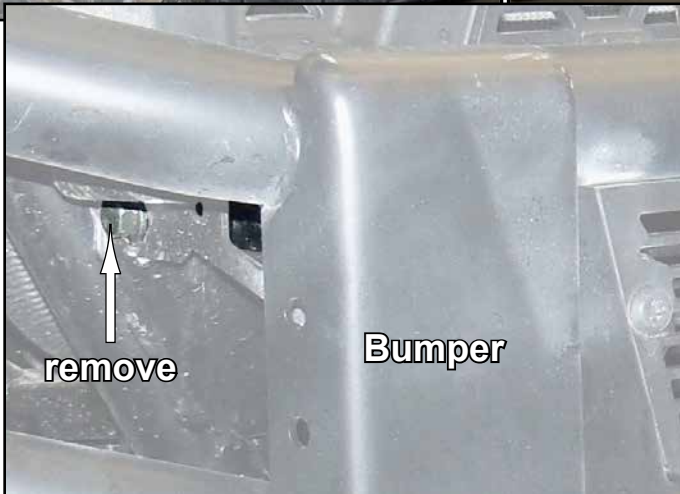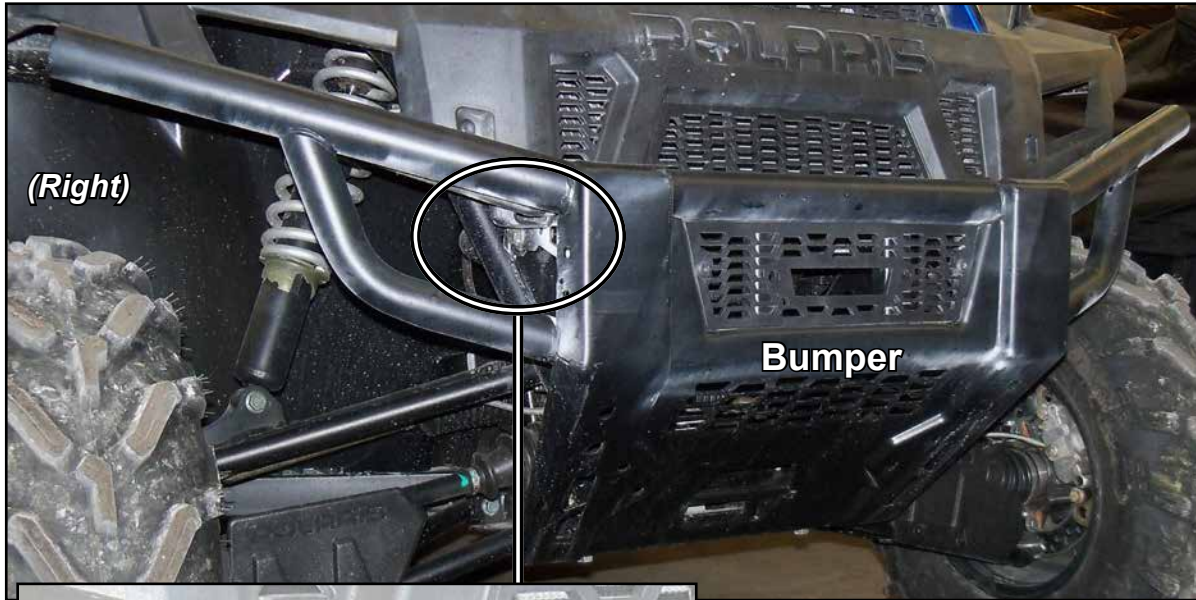


Do not tighten hardware completely unless noted.

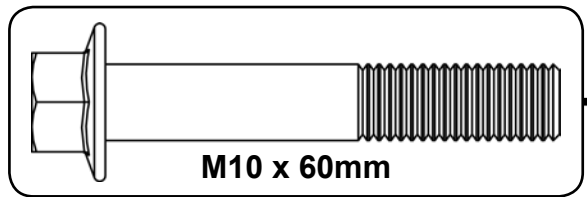


4 each

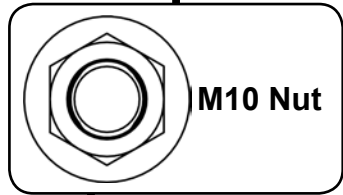


- Use hardware shown and install Supports (E) to Mount (A).

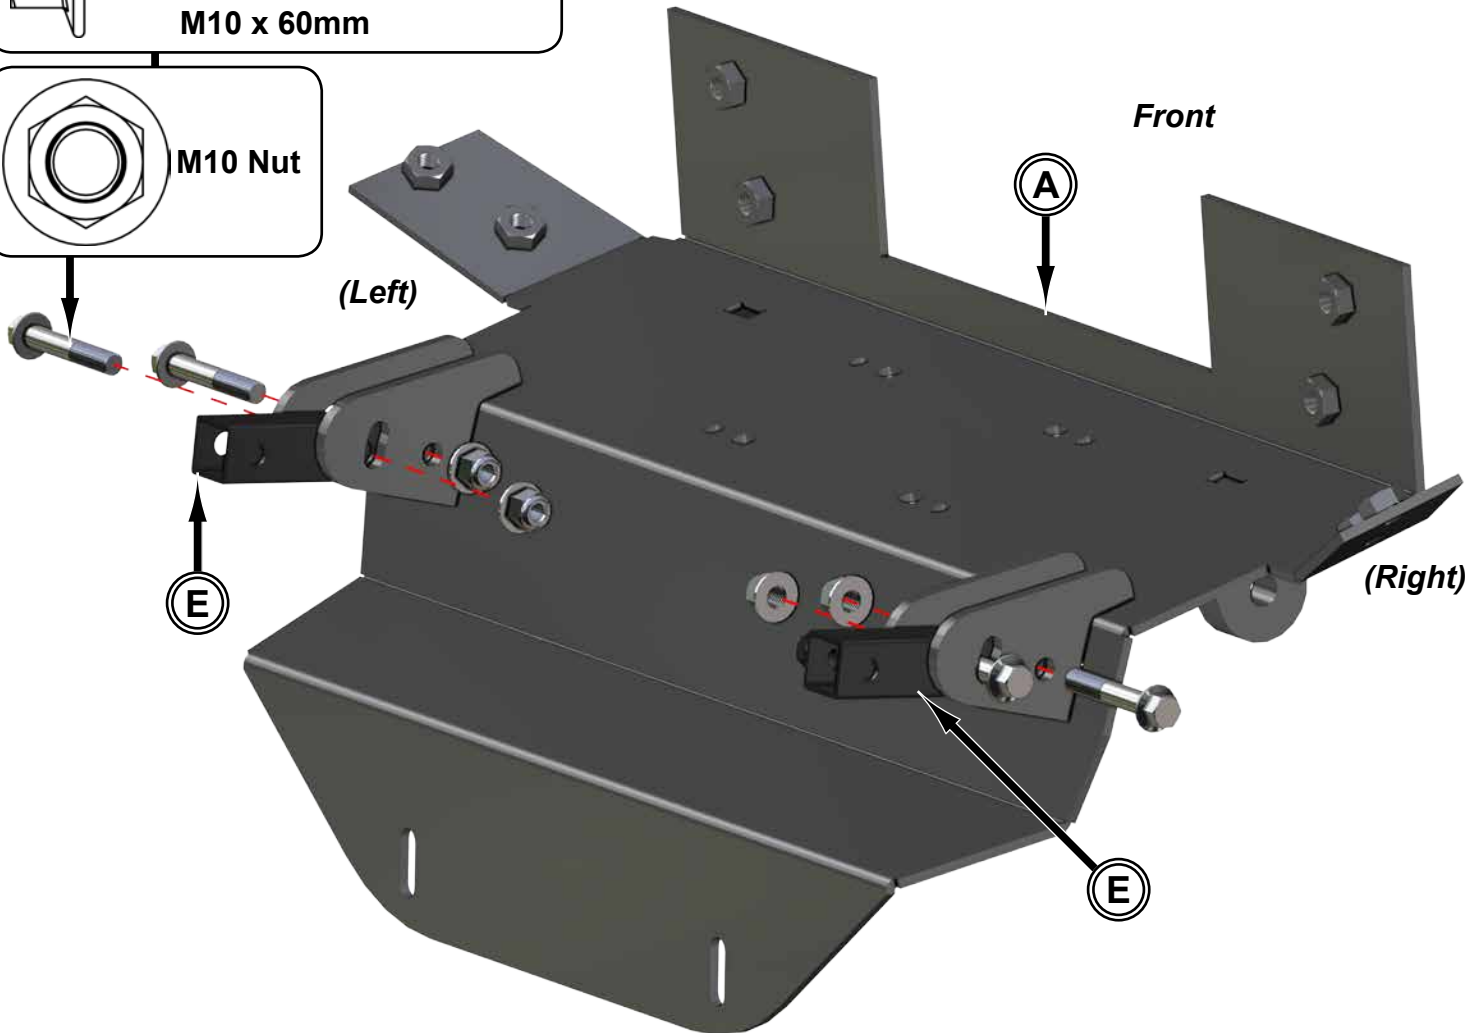

- Use hardware shown and install Supports (E) to stock Bumper mounts.

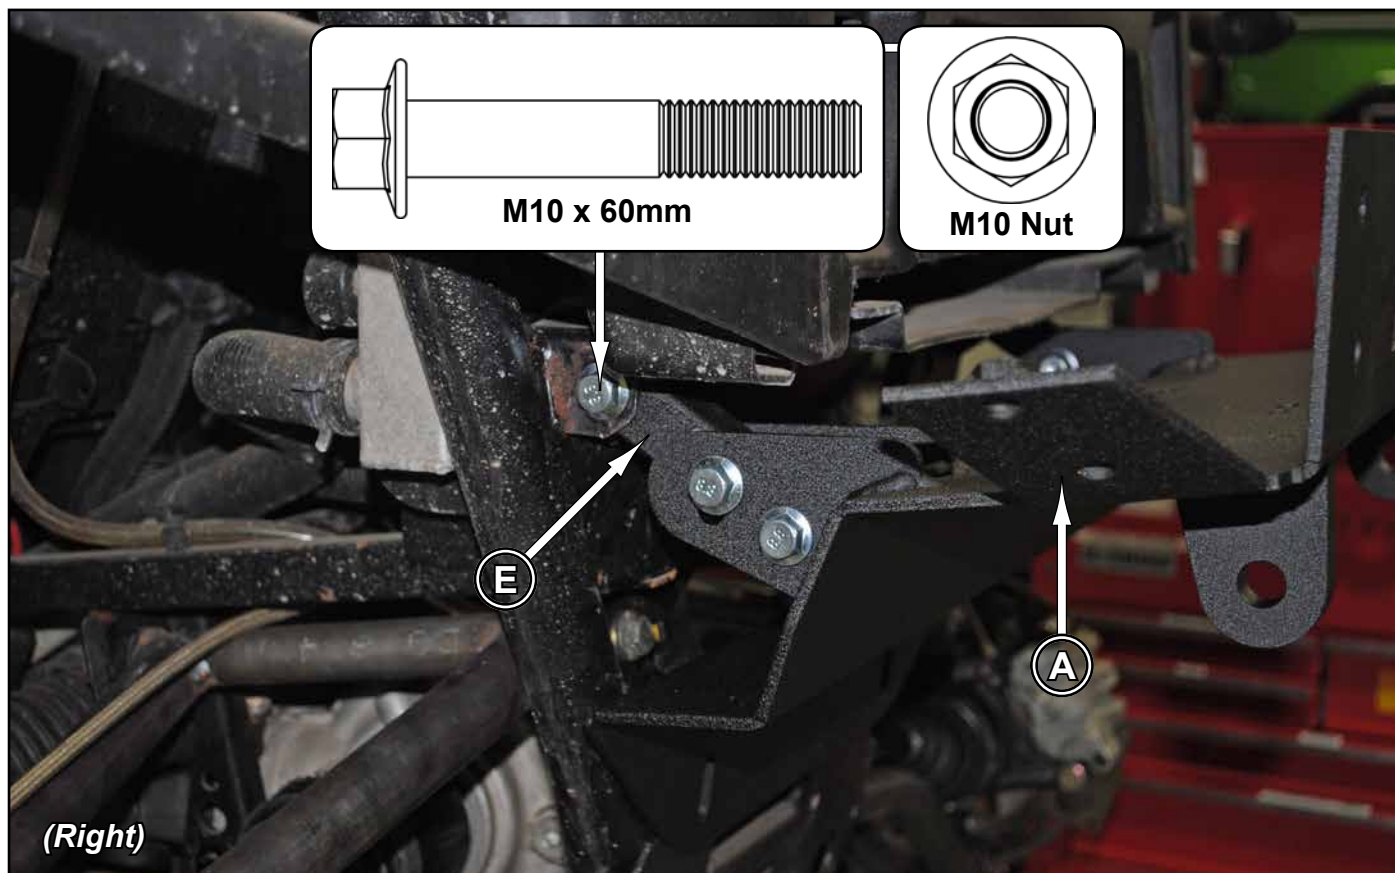


- Use hardware shown and secure Mount (A) to Frame.

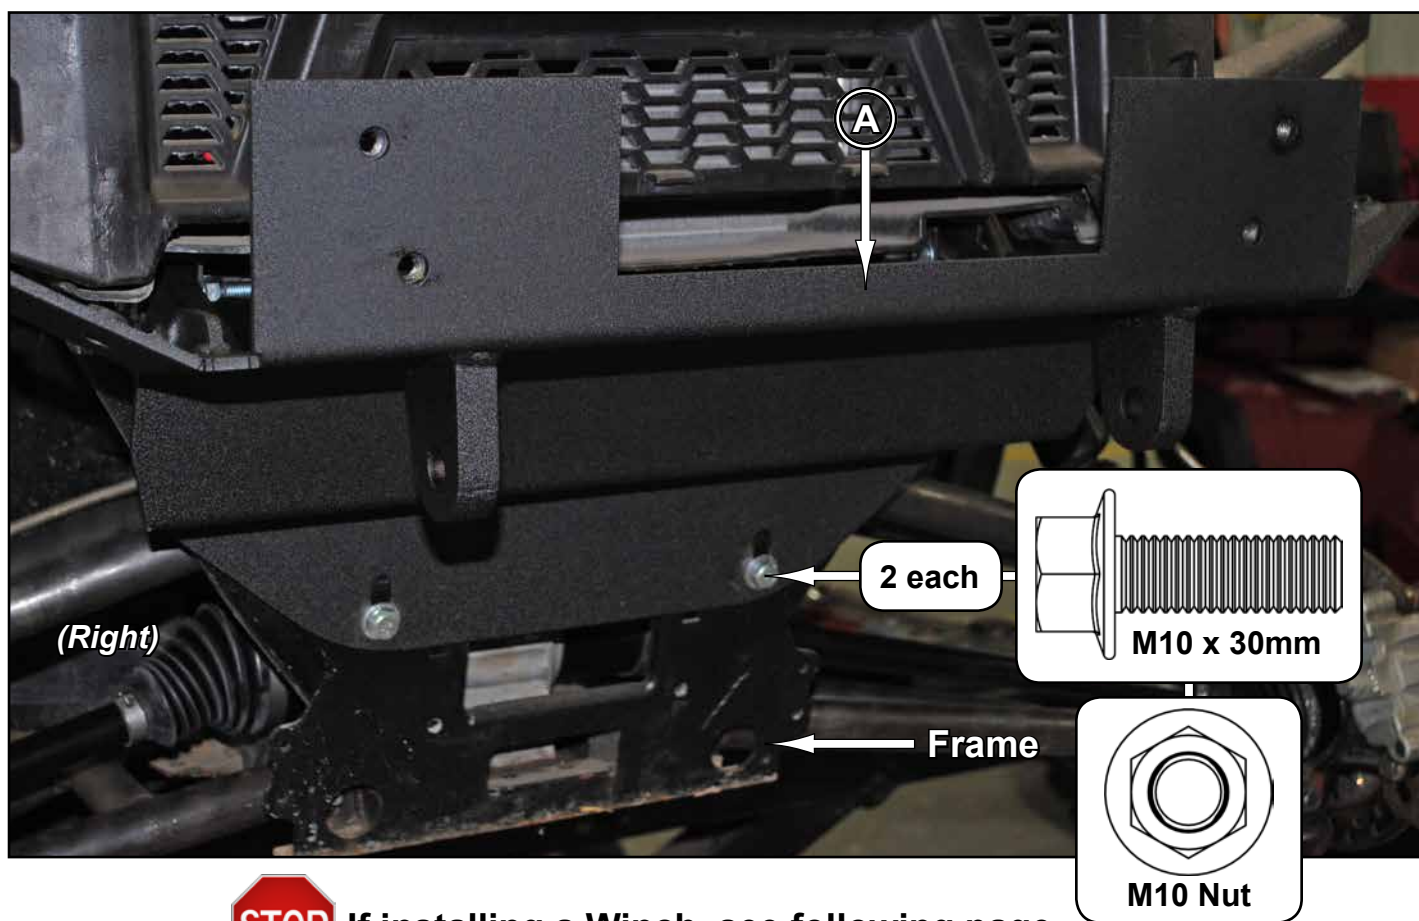

If installing a Winch, see following page.


Winch installation:

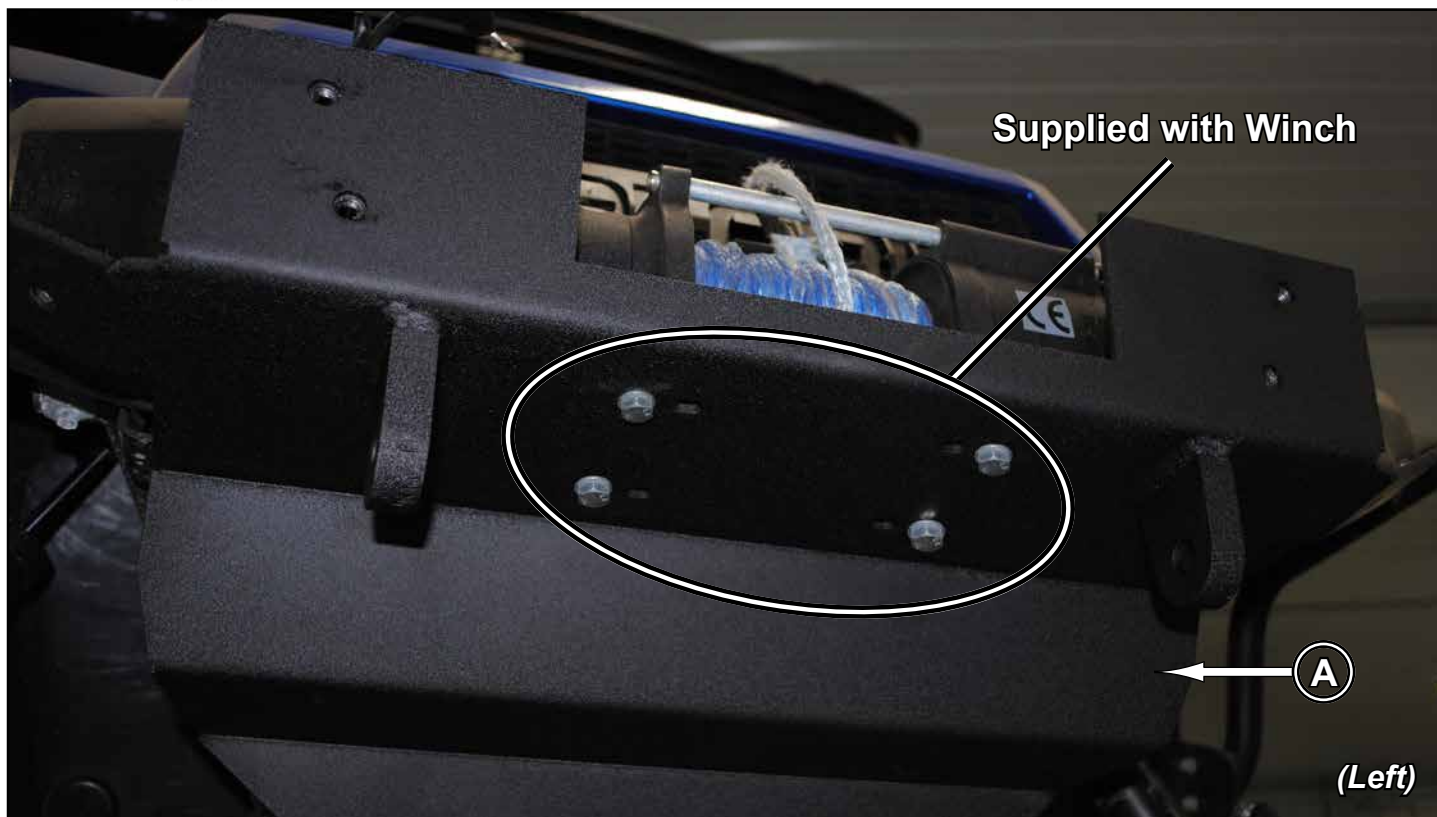

- Use hardware shown and install Brush Guard (B) to Mount (A).
- Install Fairlead, supplied with Winch, to Brush Guard (B) with hardware supplied with Winch.
- Tighten hardware completely.

3500 Lbs. Winch Fairlead see following page.


(Right)

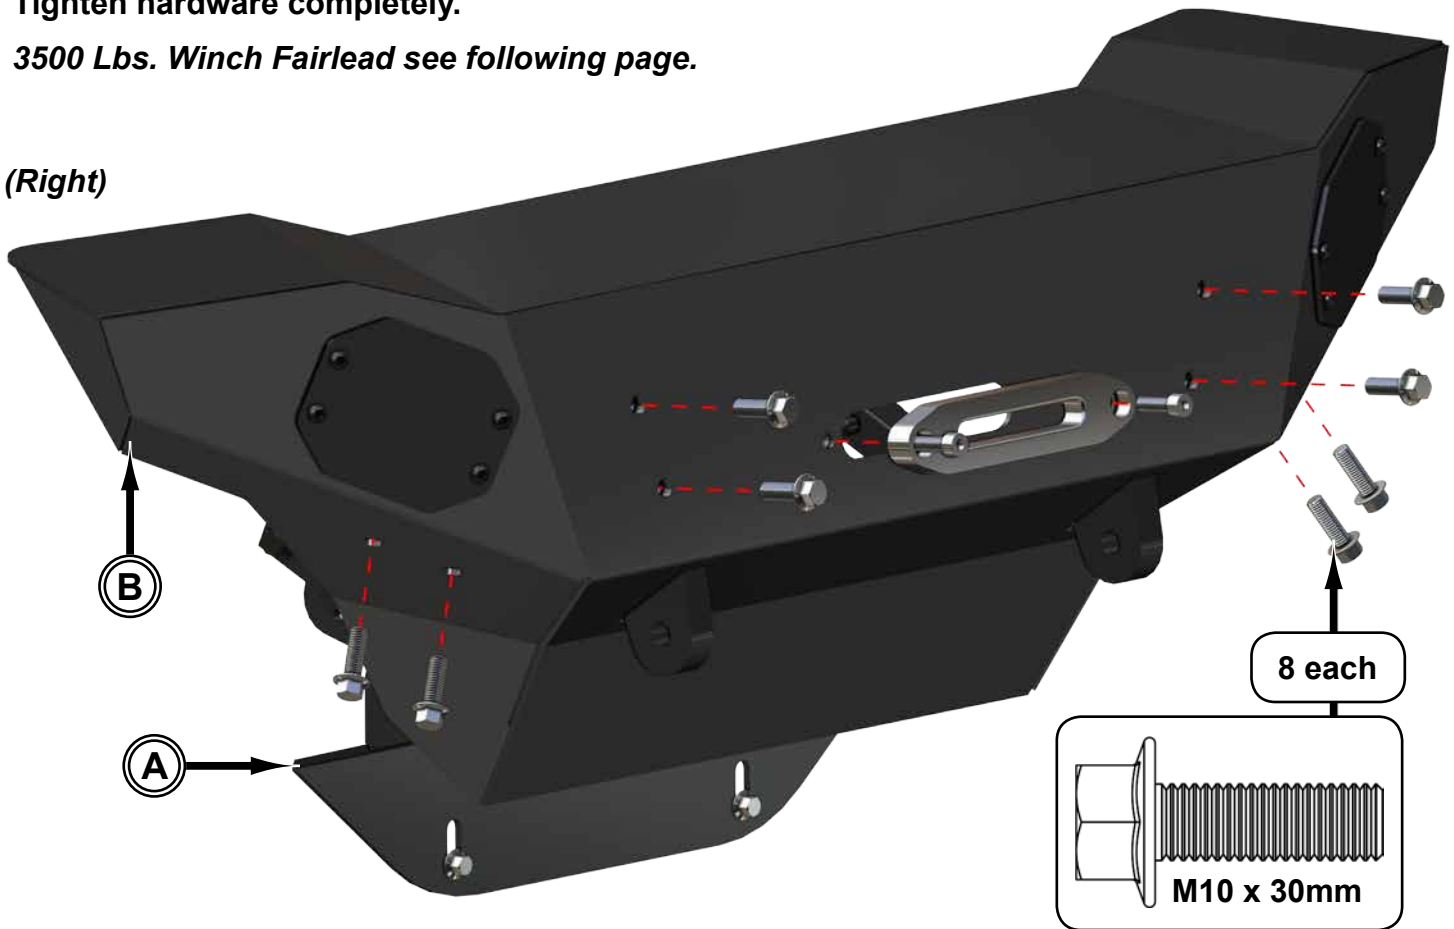


Align Brush Guard to machine and tighten hardware completely.

3500 Lbs. Winch Fairlead installation:

- Install Fairlead Adapter (G) to Brush Guard (B) with hardware shown.
- Install Fairlead, supplied with Winch, to Fairlead Adapter (G) with hardware supplied with Winch.

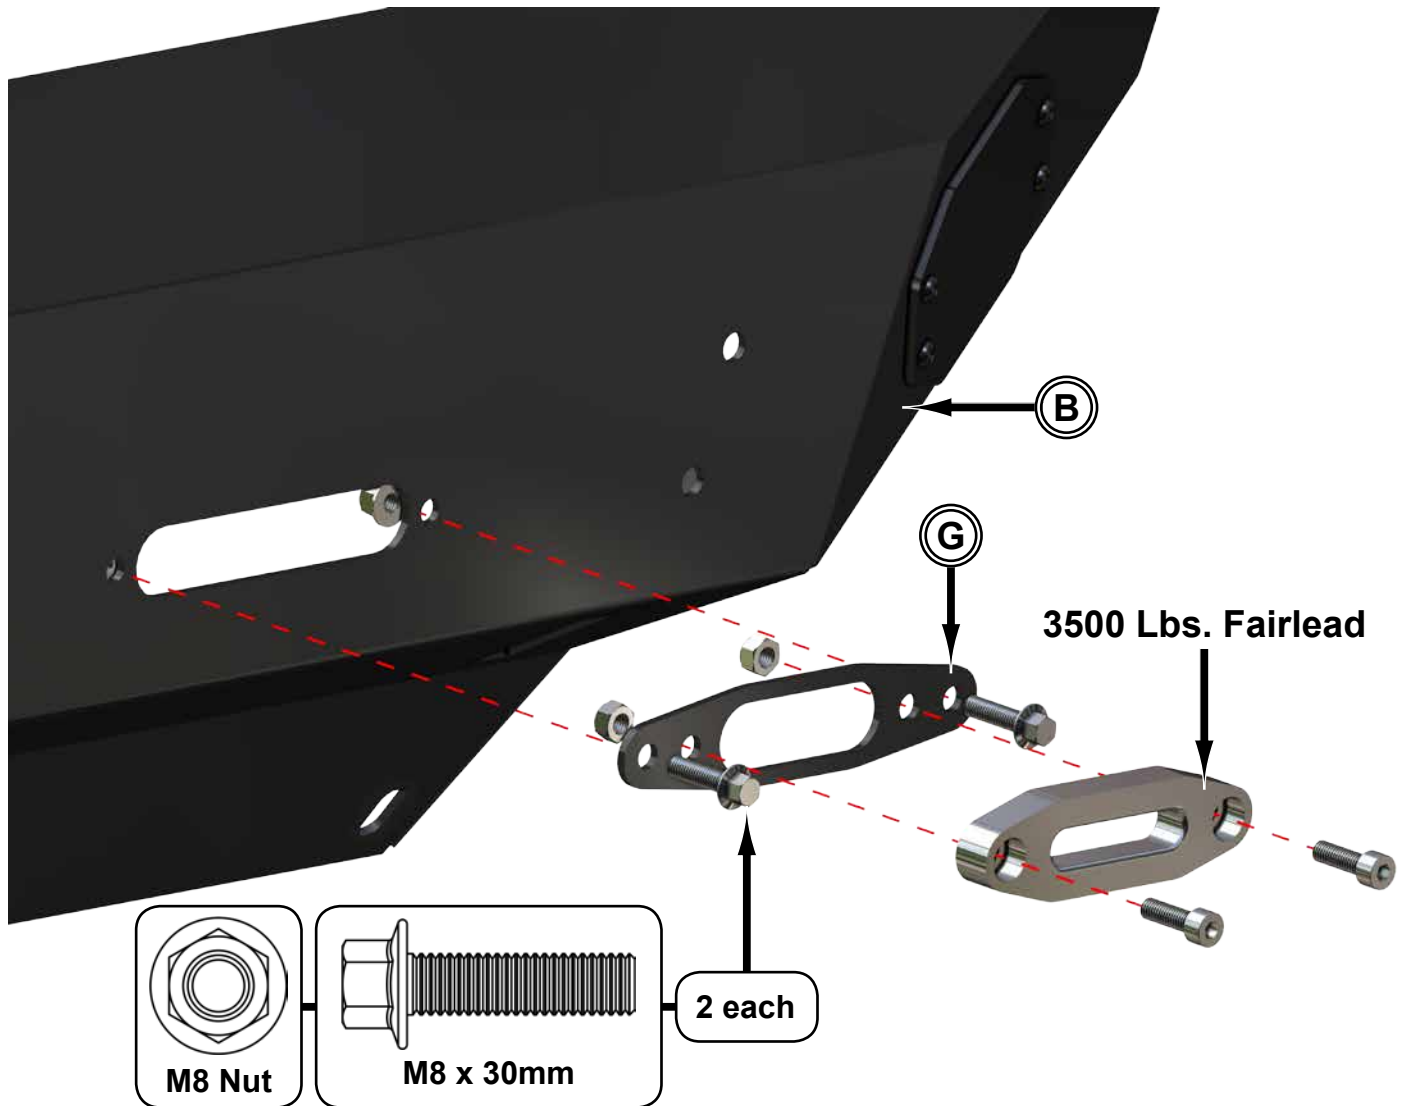

- install D-Rings (F) to Mount (A).

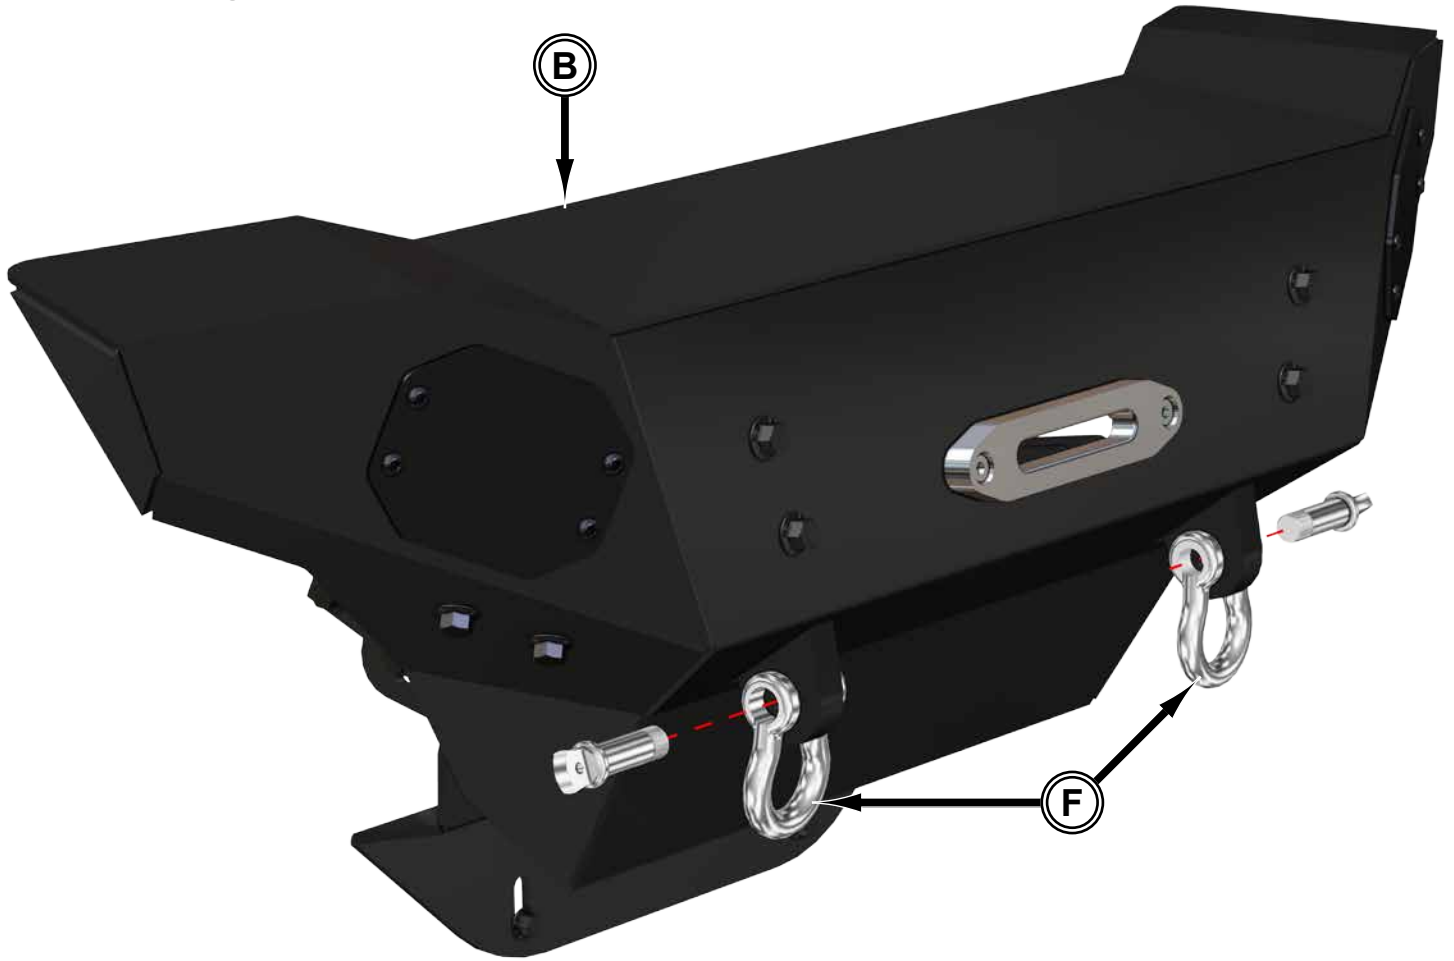


If installing LED lighting, see following pages.

LB3-12 LED Light Bar Installation


(not included)



**Replace Brackets, included with LB3-12, with LED Brackets (C)(D).
Secure with hardware included with LB3-12.
Tighten hardware completely.**

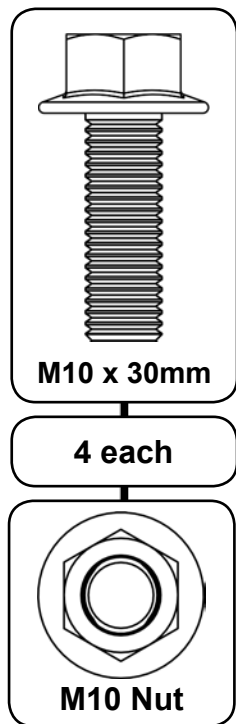



- Center LED assembly on highlighted area of Brush Guard (B).
- Mark on Brush Guard (B) slot locations in LED Brackets (C)(D).
- Drill Ø11mm holes through Brush Guard (B).
- Secure LED assembly to Brush Guard (B) with hardware shown.
- Tighten hardware completely.

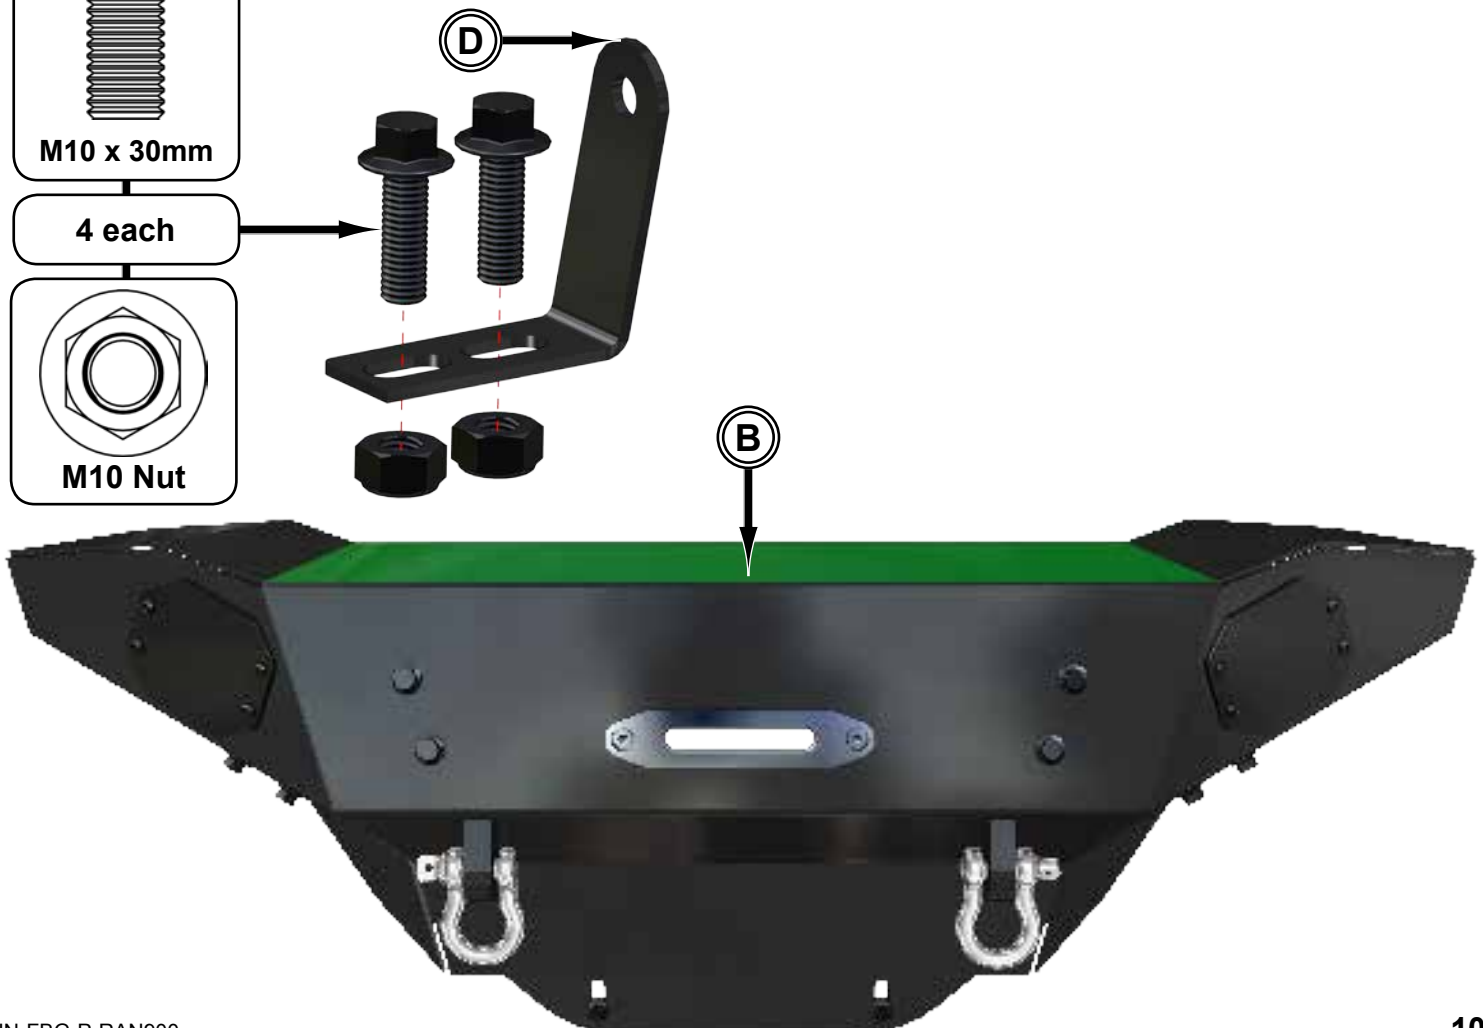

LB3-RL3 Recessed LED Light Installation


(not included)

Remove highlighted Panels and hardware from Brush Guard (B).

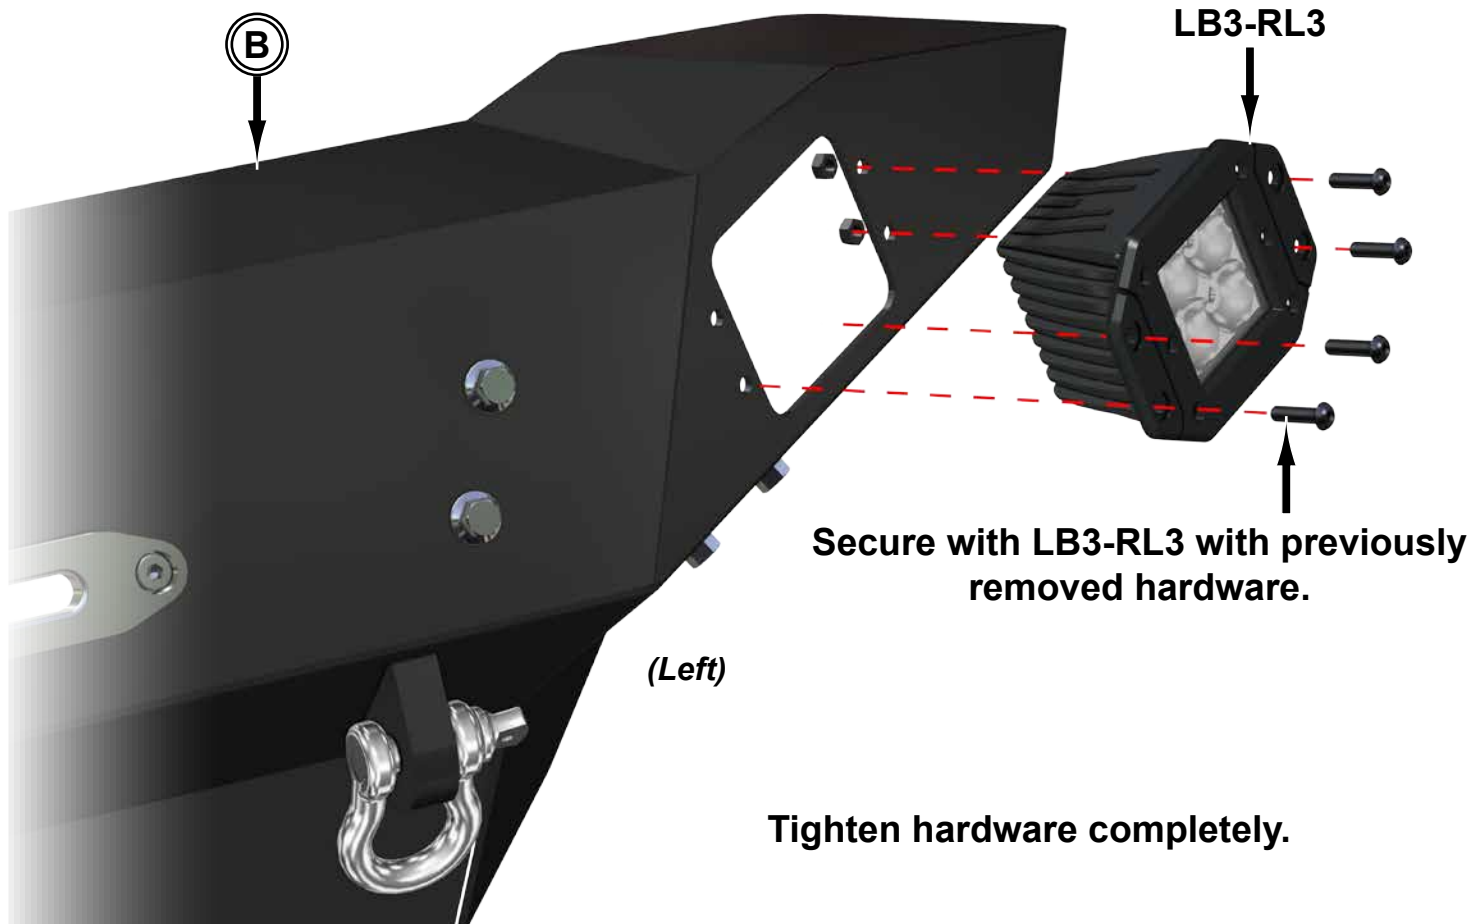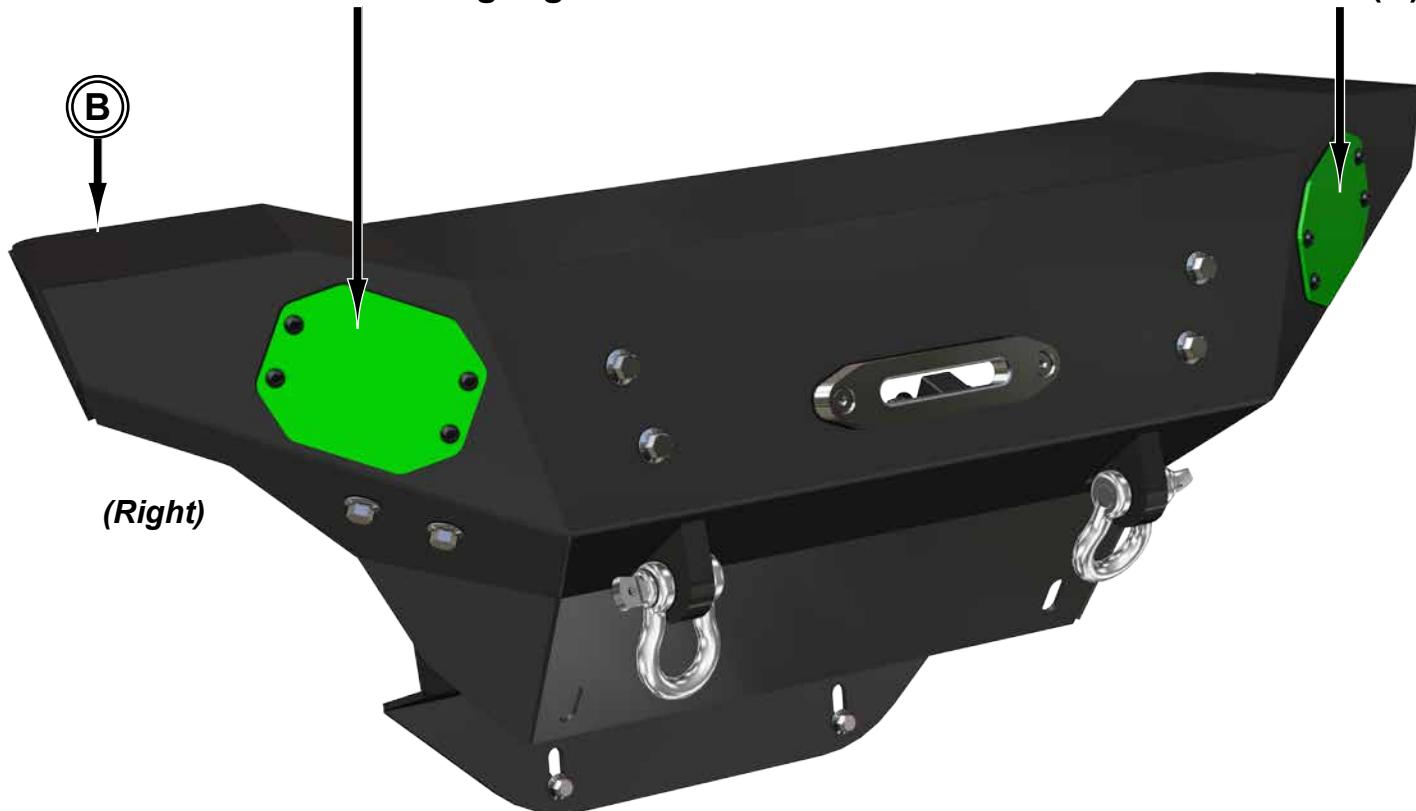

SPM-P-RAN Snow Plow Mount Installation
(not included)

 **Hardware included with Snow Plow Mount and not Brush Guard.**

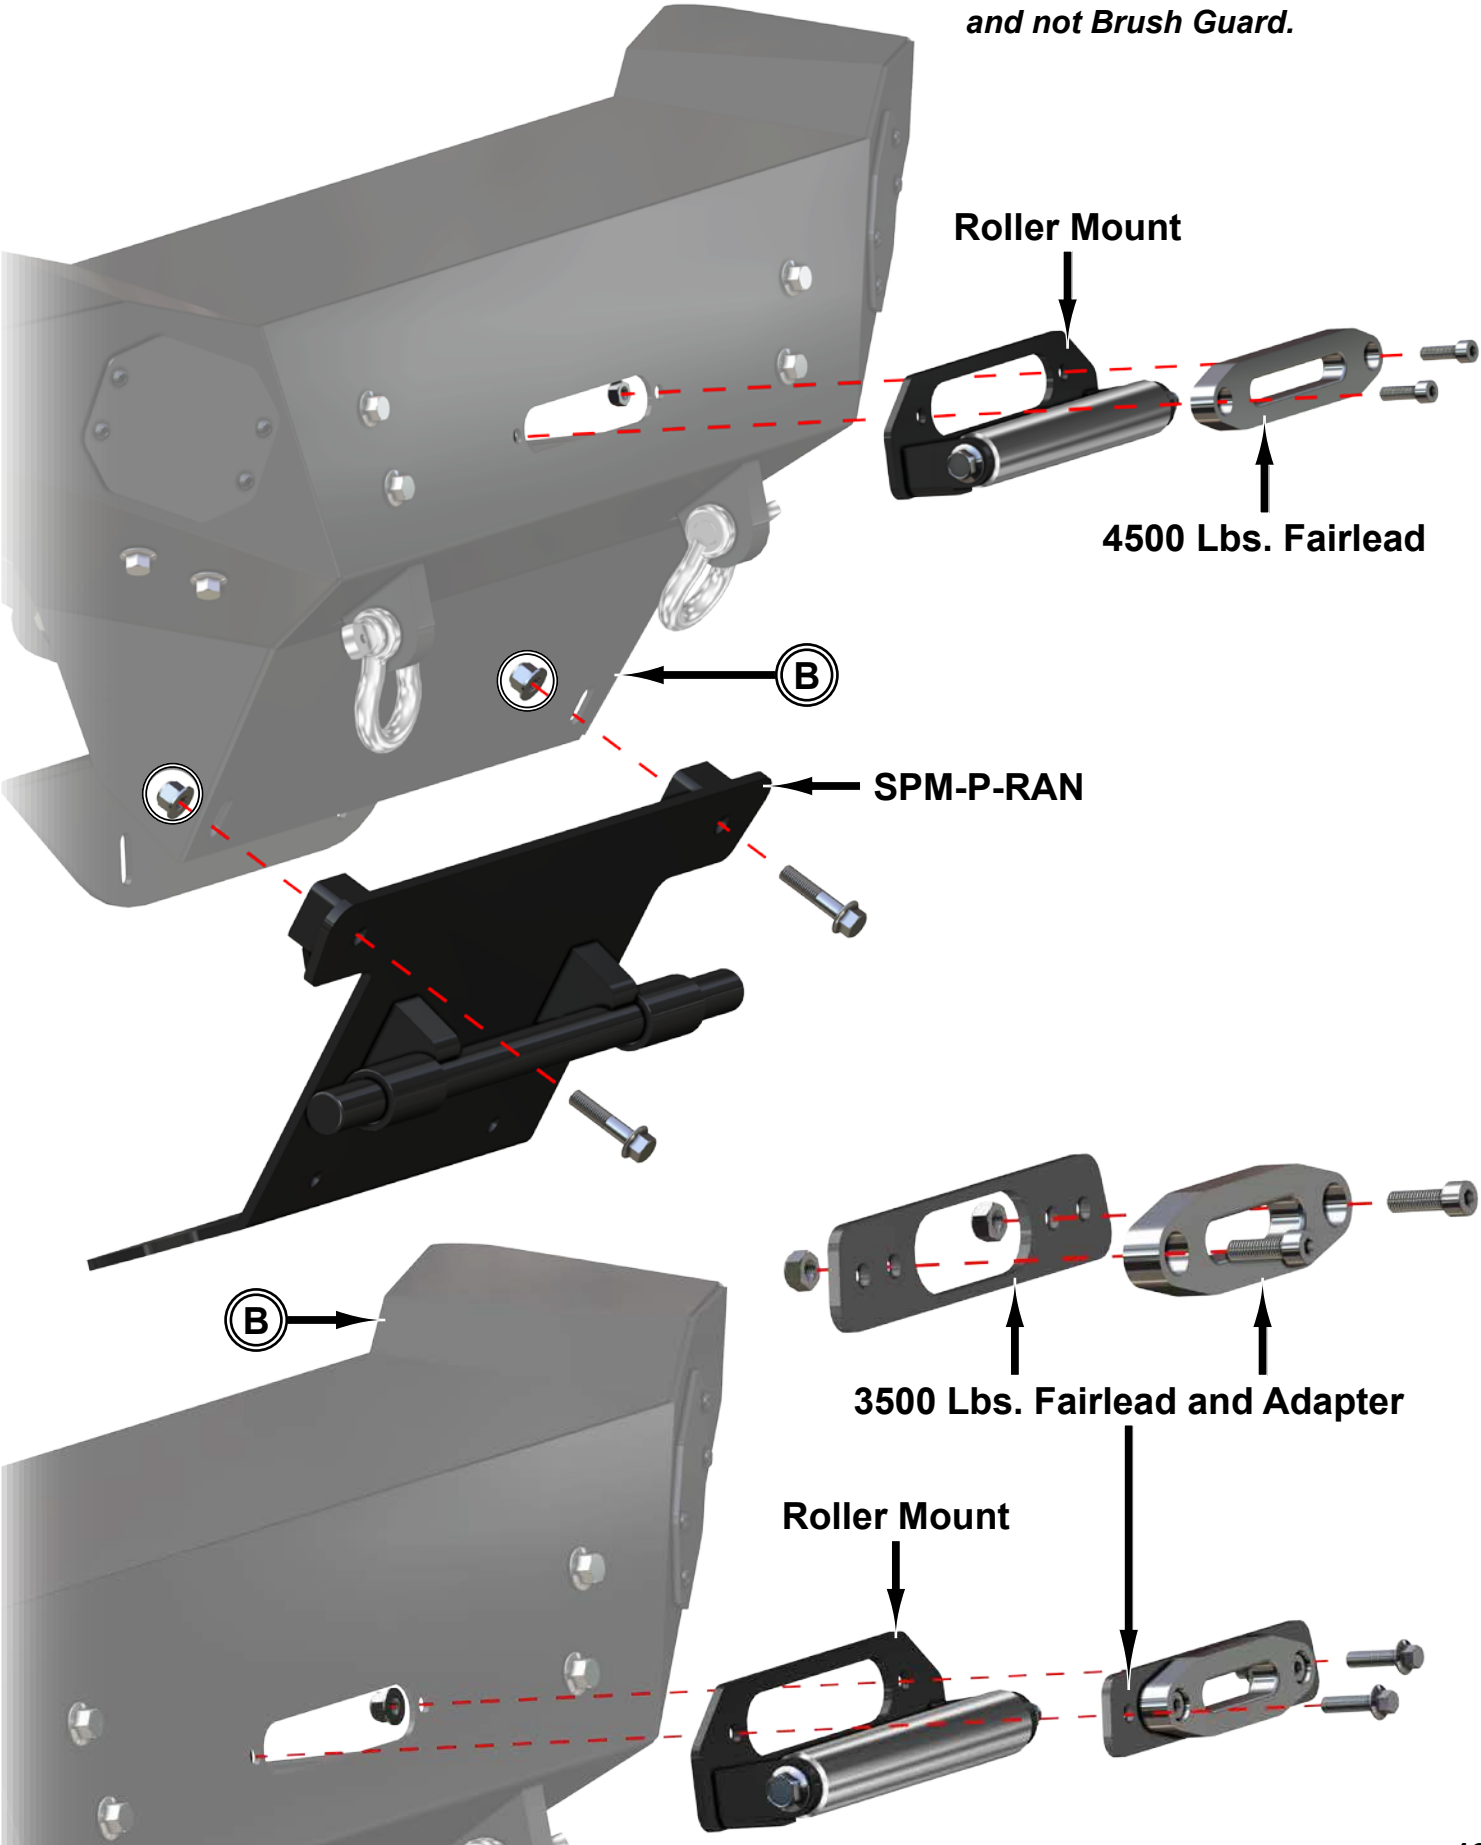

Liability Statement

SuperATV's® products are designed to best fit user's ATV/UTV under stock conditions. Adding, modifying, or fabricating any factory or aftermarket parts will void any warranty provided by SuperATV® and is not recommended. SuperATV's® products could interfere with other aftermarket accessories. If user has aftermarket products on machine, contact SuperATV® to verify that they will work together.

Although SuperATV® has thousands of satisfied customers, user should be aware that installing lift kits, long travel, or suspension kits, tires, etc. will change the ride of machine and may increase maintenance and part wear. Operating any off-road machine while, or after, consuming alcohol and/or drugs increases risk of bodily harm or death. No warranty or representation is made as to this product's ability to protect user from severe injury or death. SuperATV® urges operators and occupants to wear a helmet and appropriate riding gear at all times.

By purchasing and installing SuperATV® products, user agrees that should damages occur, SuperATV® will not be held responsible for loss of time, use, labor fees, replacement parts, or freight charges. SuperATV®, nor any 3rd party, will not be held responsible for any direct, indirect, incidental, special, or consequential damages that result from any product purchased from SuperATV®. The total liability of seller to user for all damages, losses, and causes of action, if any, shall not exceed the total purchase price paid for the product that gave rise to the claim.

SuperATV® will warranty only parts provided by SuperATV®. Any damage or problems with OEM housings, bearings, seals, or other manufacturers' products will not be covered by SuperATV®. SuperATV® parts and products are not warrantied if item was not installed properly, misused, or modified.

Installing, adding, modifying, or fabricating any factory or aftermarket product to your ATV/UTV may violate certain local, state, and federal laws. Be advised that laws vary depending on town, city, county, state, etc. Use of certain products on public streets, roads, or highways may be in violation law. The Buyer is solely and exclusively legally and personally responsible for any violation of the law by the installation or use of the product. You must abide by all local, state, and federal laws, including but not limited to vehicle safety, traffic laws, and ordinances. It is your responsibility to know the laws and how they apply to you.

The Buyer is responsible to fully understand the capability and limitations of his/her vehicle according to manufacturer specifications, warnings and instructions and agrees to hold SuperATV® harmless from any damage resulting from failure to adhere to such specifications, warnings and/ or instructions. The Buyer is also responsible to obey all applicable federal, state, and local laws and ordinances when operating his/her vehicle while using this product, and the Buyer agrees to hold SuperATV® harmless from any violation thereof.