



18017,18018,18019
INSTALLATION MANUAL

PARTS LIST

A - Mirror assembly - For all SKUS

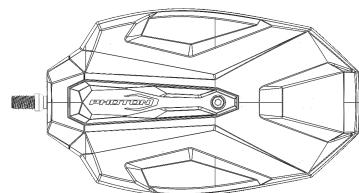


Left Mirror

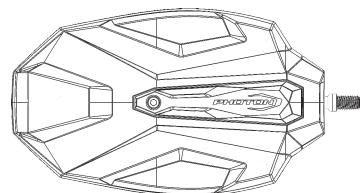

Right Mirror

18107 clamp

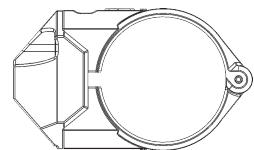

1.75" clamp assembly (2)




m5 x 30mm socket head bolts (2)



m5 x 16mm socket head bolts (6)


18108 clamp

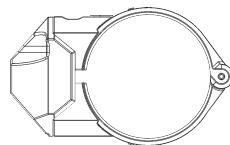

2.0" clamp assembly (2)



Rubber shim (for 1.875" Cage)




m5 x 30mm socket head bolts (2)



m5 x 16mm socket head bolts (6)

18109 clamp

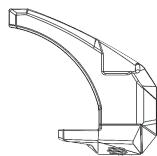

Pro-fit and Profiled clamp assembly (2)



Stainless steel hook




m8 x 30mm socket head bolts (4)



m6 x 6mm socket head bolts (2)

STEP 1


18107 & 18108

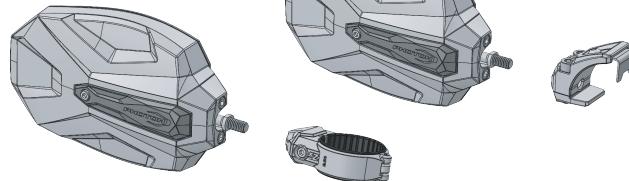

Detach clamp assembly from mirror housing assembly by unscrewing.

18017, 18018


STEP 2

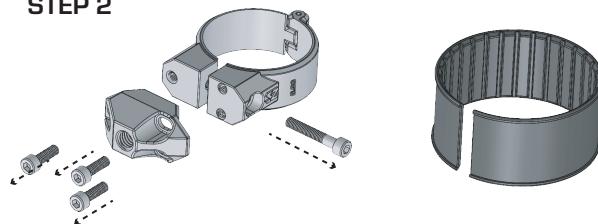

Disassemble clamp by unscrewing 4 bolts.


Warning: *Only use rubber shim on 1.875" diameter tube.

STEP 3

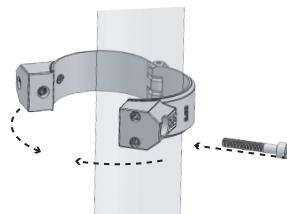


Open clamp and place around roll cage tube. Close clamp around roll cage tube, put the m5 x 30mm bolt through the hole.

STEP 4

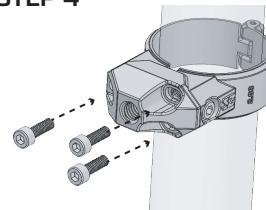


Complete the clamp assembly by putting 3 m5x16mm bolts. **DO NOT TIGHTEN THEM ALL THE WAY YET.**

STEP 5

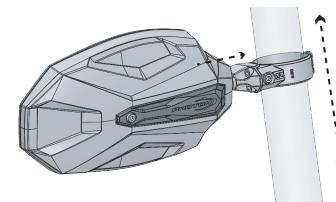


Temporarily assemble the mirror housing on the clamp to position the clamp at desired height.

STEP 6

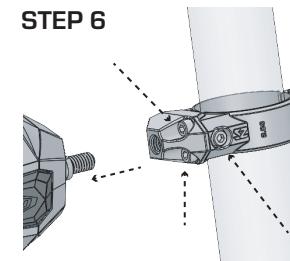


Remove mirror housing from the clamp. Tighten all clamp bolts to secure the clamp on the roll cage.

STEP 3

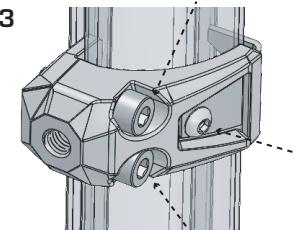


Place both halves of the clamp around roll cage tube. Complete the clamp assembly by tightening bolts. **DO NOT TIGHTEN THEM ALL THE WAY YET.**

STEP 4

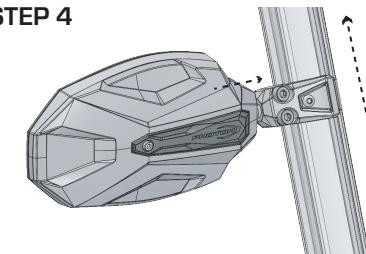

Temporarily assemble the mirror housing on the clamp to position the clamp at desired height.


STEP 5

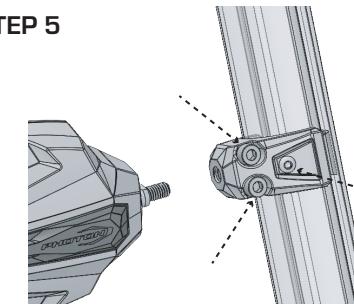

Remove mirror housing from the clamp. Tighten all clamp bolts


STEP 6 see STEP 7 - 9

STEP 7

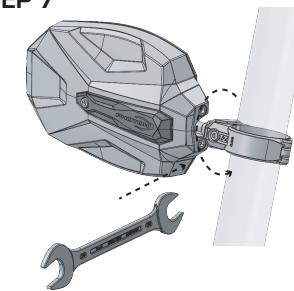


Assemble the mirror housing back onto the clamp. Use a 12mm wrench to tighten the ball stud on the clamp

STEP 8

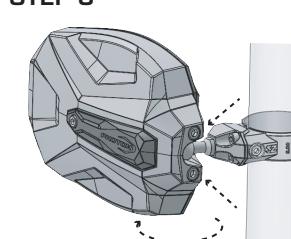

Turn the mirror housing to tighten the ball joint.


STEP 9

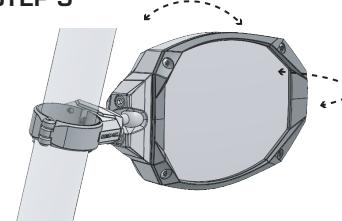

Rotate mirror on clamp so that it is level and provides desired viewing angle.

18019

STEP 2

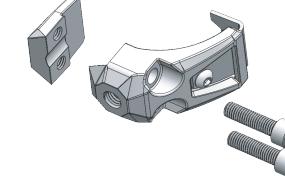

Disassemble clamp by unscrewing 2 m8x30mm bolts.