



20005-20010 – Double Gun Boot Bed Mount


Description	Quantity
Main Weldment	2
U-Bracket	2
5/16" x 3/4" Carriage Bolt	2
5/16" Washer	14
5/16" Nylon Nut	8
5/16" x 1.00" Lag Bolt	6
5/16" x 1.00" Hex Head Bolt	6
Square Pin	2

Mounting Instructions:

1. First, attach the U-Bracket to the Main Weldment using the 5/16" Carriage Bolt, Washer, and Nylon Nut provided. Snug the bolt so that you can still move the bracket with some resistance. This will allow you to position your brackets easily, and then tighten at the correct setting.



2. Now, place the Gun Boot 6.0 into the brackets. The "nose" of the Gun Boot will slide into the Main Weldment as shown. The U-Bracket (shown in above photo) is designed to Pin through the rear slot located near the back of the Gun Boot. Position the brackets to the setting of your choice in the bed of your UTV.

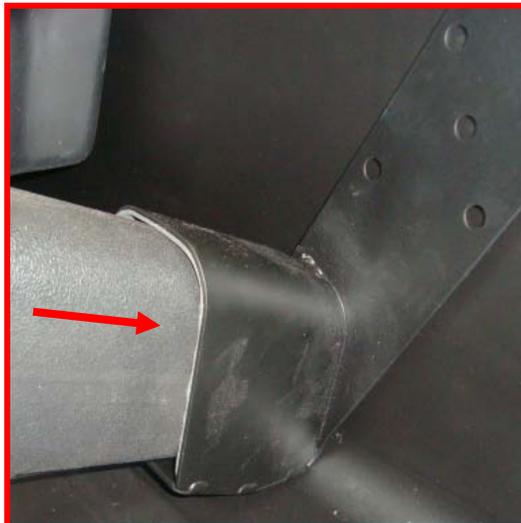



3. Slide the U-Bracket as far forward into the slot, so that the pin is located at the front of the slot in the Gun Boot and this will push the nose of the Gun Boot tight into the Bracket. This will keep the Gun Boot from being able to slide back and forth in the Bracket during operation.



4. Once both Gun Boots are secured in the bracket, mark the hole location on the wall of your bed.
Note: You will probably need assistance to make sure the brackets are positioned correctly in your bed. Be sure you double check your hole pattern before drilling!
5. Finally, attach the bracket to the bed of the UTV, using either the 5/16" Lag Bolts (for Metal Beds Only), or the 5/16" Hex Head Bolts with Washer and Nylon Nut (for Plastic or Metal Beds). Tighten Securely, and be certain not to over tighten the lag bolts as the threads could strip!

NOTE: BE SURE TO CHECK HARDWARE FROM TIME TO TIME TO ENSURE THE HARDWARE DID NOT LOOSEN DUE TO VIBRATIONS AND ROUGH TERRAIN.

The 20005 is able to be used on UTV Beds with Dimensions between 55.00" – 47.75" (Ranger, RangerXP, Mule)
The 20010 is able to be used on UTV Beds with Dimensions between 48.50" – 43.50" (Rhino, Teryx, Ranger 400)



Kolpin Outdoors, Inc.
205 N. Depot St, Fox Lake, WI 53933
Phone #: (877) 9KOLPIN or (920) 928-3118
www.kolpin.com customerservice@kolpin.com