


Polaris Ranger 1000XP

Part No.: 2444.7454.1 Rock Sliders
Brand: Polaris
Model: Ranger 1000XP
Year: 2018-
Material: Tube Ø42x2 mm



Content


1. Rock slider.....	2 pc.
2. Bolt M8x60.....	4 pc.
3. Bolt M8x70.....	2 pc.
4. Washer 8.....	6 pc.

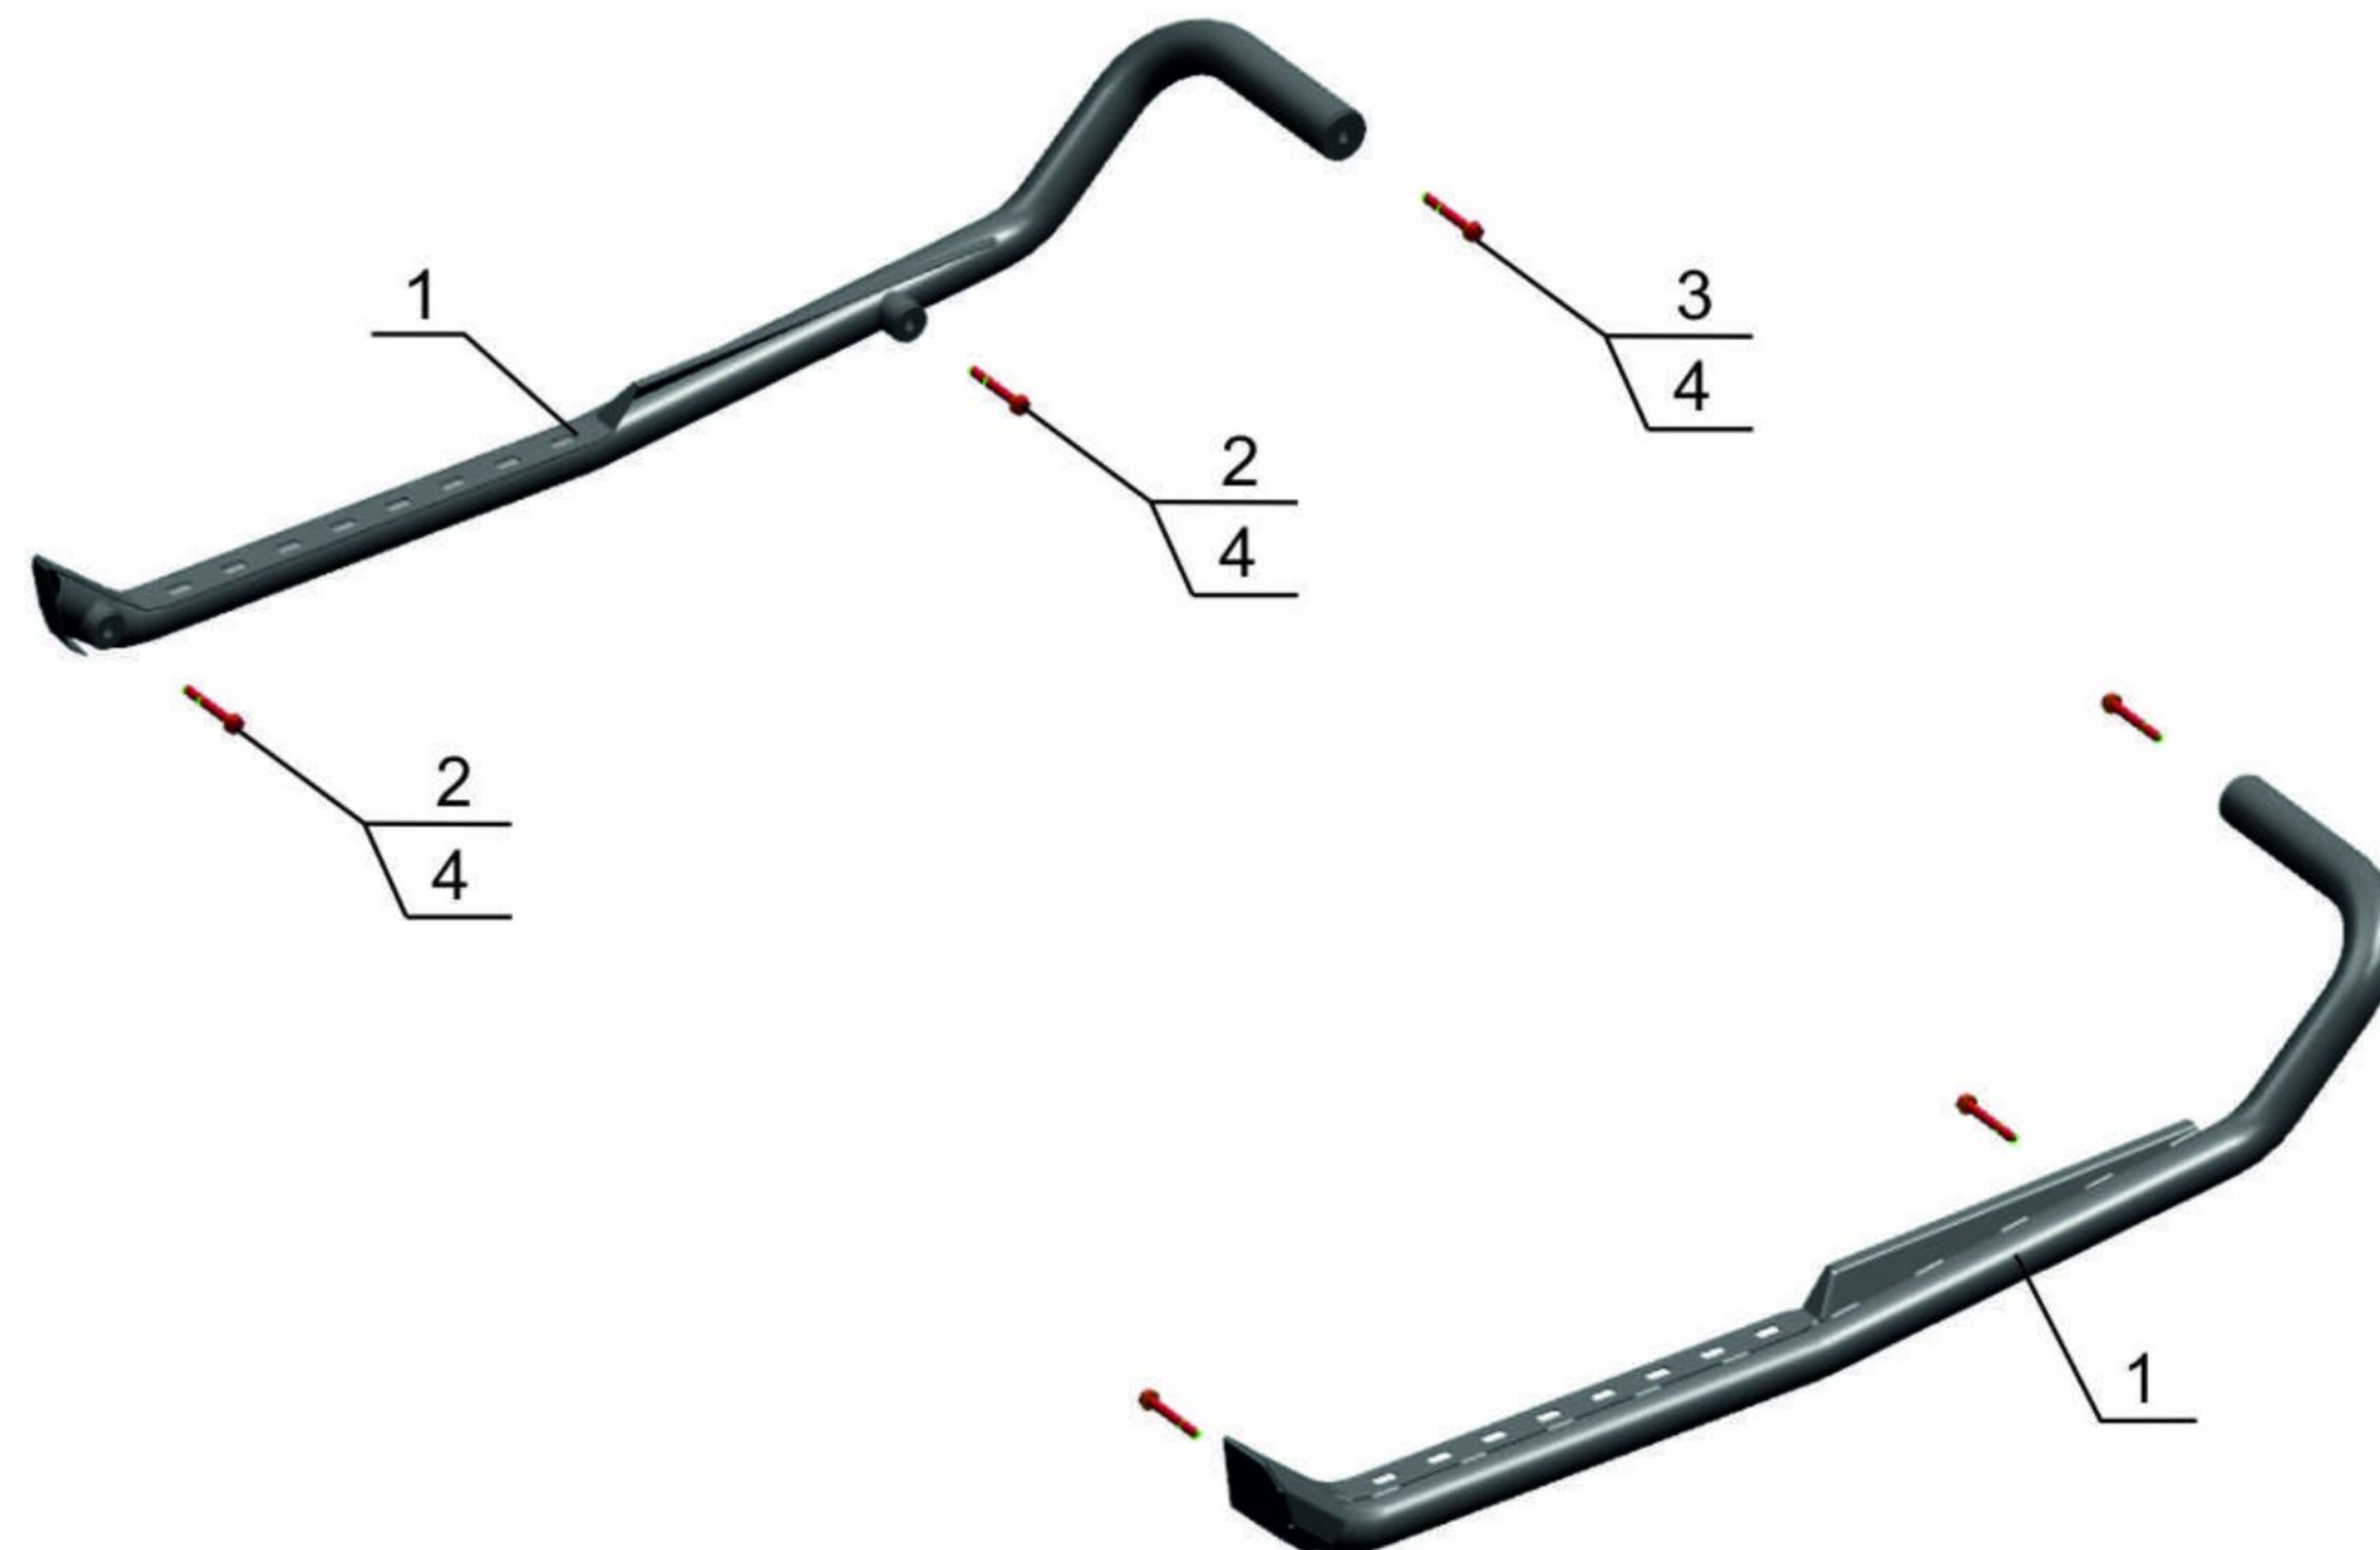

Installation Instructions

1. Drill 3 holes with a diameter of 35 mm in rocker panel to install the rock slider.
2. Fix the rock slider to the frame with bolts M8x60, washers M no. 4, at the back with M8x70, washers M no. 4.
3. Tighten all threaded connections.

TOOLS REQUIRED

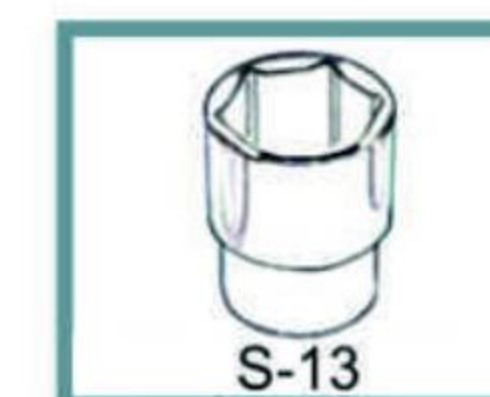

SCREW FORCE



M6-10 Nm



M8-30 Nm



M10-50 Nm