



Auto Style Seatbelt Harness Instructions (A16UH348/A16UH349)

*****NOTE: Prior to installation, please verify if a revised version of this instruction sheet is available on proarmor.com.***
FOR PASSENGER SIDE AUTO-STYLE HARNESES (A16UH349): WILL NOT REQUIRE STEP 1.**

Vehicle Preparation

1. Remove seat.
2. Remove lateral console panel.
3. Remove seat belt from vehicle.
4. Disconnect seat belt connector from vehicle harness.




For installation on driver side, connect 4 point harness connector to vehicle seat belt connector located under lower console. (Verify connector works properly following connection)



Place the eyelet at approximately 45° up from underseat body panel secure harness in place using previously removed bolt and retaining nut from OEM belt removal.
TIGHTENING TORQUE: 60N m 44lbf ft.

- a. Re-install seat
- b. Run harness straps through seat headrest.

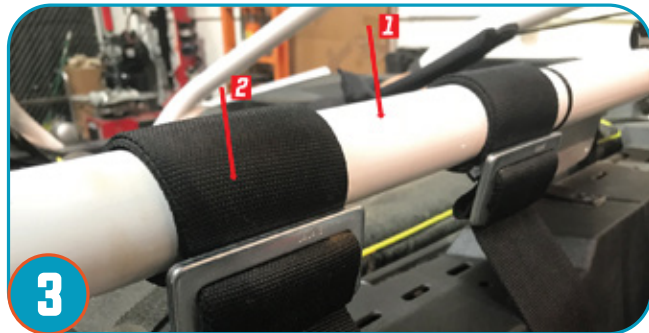

1. 4 Point harness bar
2. Cinch down harness to harness bar or bolt with eyebolt provided (optional).



Harness attachment & Adjustment
Note: Buckle should be as close as possible to Harness Bar and have at least 100mm (4in) of free strapping out of the buckle.



Buckle lap belt first. Belt should sit on the illiac crest, NOT on the abdomen, making sure the pads sit on your shoulders and collarbone.



Make sure chest strap is at least 10cm (4in) below your neck and adjust chest straps so they barely hold the straps at a comfortable width for your neck.



Auto Style Seatbelt Harness Instructions (A16UH348/A16UH349)



Unfastening Instructions:

Before unbuckling, loosen shoulder straps by pulling up on the quick release and down on the strap, then unbuckle chest strap and lap buckle

CARE:

Inspect harness regularly for wear or damage. Use only mild soap or warm water for cleaning. Do not use bleach or solvents to clean. Do not machine wash or dry clean. Air dry only. Prolonged exposure to direct sunlight can degrade and breakdown harness fibers.



WARNING LABEL: This Product comes with the following WARNING labels containing important information. TO REDUCE THE RISK OF INJURY OR DEATH YOU SHOULD ALWAYS:



STERNUM STRAP MUST SIT AT LEAST 4" BELOW YOUR NECKLINE. ALL LATCHES MUST BE SECURE. HARNESS, SHOULDER AND LAP STRAPS MUST BE TIGHTENED FIRMLY AGAINST BODY AT ALL TIMES. FAILURE TO DO SO MAY RESULT IN SERIOUS INJURY OR DEATH

Any person who intends to use this product should read and understand the information contained on the labels before doing so. See included booklet for additional safety information.

- **Never** stick hands, head or arms outside of vehicle at any time when it is in motion.
- **Always** wear and use proper safety equipment when using any Pro Armor product.
- Improper use of directions and/or product can result in injury to yourself or damage to your vehicle.
- **Disclaimer please read:** This product is sold without warranty expressed or implied. No warranty or representation is made as to the products ability to protect the user / occupant from any injury or death in any manner of use. The user assumes that risk. The effectiveness of this equipment is directly related to the manner in which it is installed, used, and / or maintained.
- **Proper installation is solely the responsibility of the installer, and will not be assumed by Pro Armor.**
- If you have questions about your installation or are unable able to complete installation, contact Pro Armor Customer Service (888)312-7667 or have an authorized dealer or trained technician, inspect your installation.

⚠ WARNING