

Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041
606-845-7439

Instructions for Installation and Care of Ranger Crew Full Cab Enclosure With Vinyl Windshield PO-10CREW-FC01

CAUTION: Do not smoke inside the cab or expose the enclosure to direct flames. Product is FLAMMABLE. Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when the temperature is 70°F or warmer. The temperature affects the adhesive Velcro. If conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.

1. Carefully open the carton and unroll the enclosure on a large flat surface that is clean and free of dirt or other material.
2. Raise the bed prior to installing the cab enclosure.
3. Check over the parts included in the carton with the parts list shown below:

Velcro hook strips	2 each	3" long
Velcro hook strips	2 each	4" long
Velcro hook strips	2 each	5" long
Velcro hook strips	4 each	10" long
Velcro hook strips	1 each	60" long
Snap studs	28 each	(2 extra)
4. Loosely drape the enclosure over the roll cage. Now note the positions for the 6", 5", and 8" tabs up the front of the roll cage as well as the 9" double-sided Velcro strap. Clean the front downtubes and apply the corresponding adhesive Velcro strips to the roll cage. The 9" double-sided strap will have a 6" adhesive strip that must be wrapped around the roll cage at the center downtube. Attach all sewn-in Velcro tabs to their respective adhesive Velcro strips applied to the front downtubes, and wrap the two double-sided Velcro straps around the roll cage tube. See figs. 1 and 2.

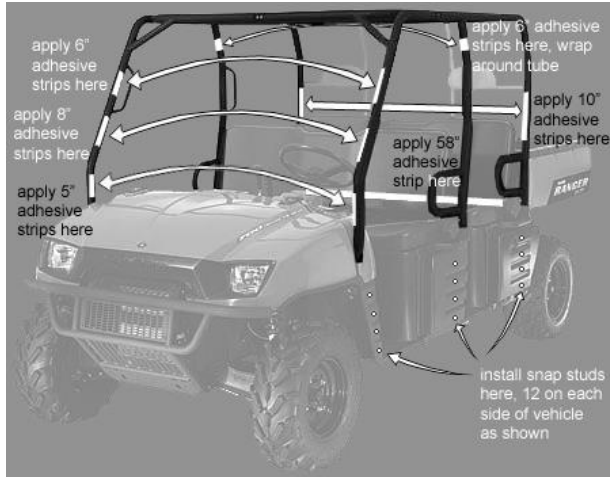


Fig.1

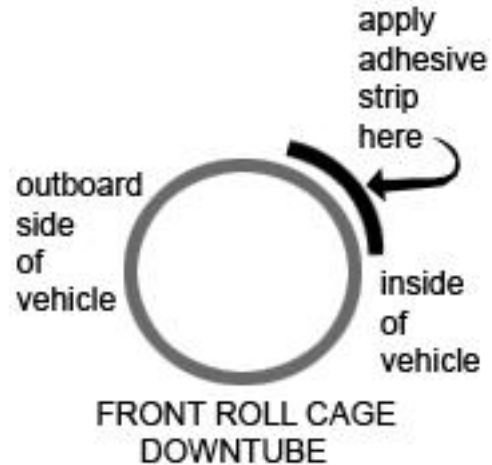


Fig.2

5. Undo all Velcro attachments at the front of the vehicle to make room for the windshield, and install the Lexan windshield in accordance with the separate instructions provided. Reattach all Velcro at the front of the vehicle afterwards.
6. Raise the bed. Working your way to the rear of the roll cage, carefully fit the enclosure into position. Pull the lower edge of the rear panel down between the rear of the roll cage and the front of the bed. Apply the 58" adhesive Velcro strip across the chassis here, then attach the corresponding sewn-in Velcro tab on the enclosure to the adhesive Velcro strip on the chassis.
7. Mark the locations for the stud snaps on the fenders and side panels by carefully scribing where the snap caps hit the bodywork with an appropriate non-permanent marker. Install the stud snaps to the plastic body cladding using only a #2 Phillips screwdriver. **DO NOT USE A POWER DRILL/DRIVER AS DAMAGE TO THE FUEL TANK CAN OCCUR.**
8. To open and stow the doors, move the zipper fully rearward and fold the bottom portion of the doors up and attach to the two hook and loop strips. Then begin to form a vertical roll with the door by rolling it inward from the front edge toward the rear of the door. Secure in place using the two hook and loop straps sewn into the enclosure. Try to form a roll approximately 2" in diameter to assure that the door will not protrude while stowed.

Cleaning and Storage Recommendations:

1. Before removing the enclosure for storage, make sure it is clean and dry, to prevent soiling the textile and scratching the clear vinyl windows. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Let the enclosure dry thoroughly before attempting to roll for storage.
2. It is important that the enclosure be rolled up for storage rather than folding. Folding will cause undesirable creasing of both the enclosure textile and the clear vinyl windows. Carefully roll up the enclosure similar to the way it was when it was packed at the factory. Put the rolled enclosure back into the carton for storage at a normal room

temperature. It is best not to expose the enclosure to either extreme hot or cold temperatures when storing.

3. A special cleaner/conditioner is available from Mammoth Designs that will greatly increase the service life of the cab enclosure. If needed, additional hook and loop sets are available, as well as other spare parts and hardware. Contact Mammoth Designs for information.
4. Transporting or trailering your UTV with the enclosure installed is not generally recommended. It is best to remove the enclosure before transporting your UTV.

Thank you for your purchase!