

Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041
606-845-7439

Instructions for Installation and Care of Polaris Ranger Size 2014-18 Soft Top Cap PO-14 FULLRANGER-TC01

Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.

1. Be sure to read these instructions thoroughly before opening and installing the Full-Size RangerTop Cap. The installation is best done when the temperature is 70 degrees F. or warmer. This is to allow the Velcro to stick to the roll cage better, if you must install outside in the cold it will help to warm the Velcro inside at room temp. until ready to install.
2. Check over the parts included in the carton with the parts list shown below:


Top Cap

Webbing Strap w/ Loop	2 each	60"
Webbing Strap w/ Loop	2 each	25"
Allen Head Bolts	2 each	
Spacer Tubes	4 each	
Washers	2 each	


1. Included in the package are two webbing straps with a loop sewn on one end. These will be used to secure the rear of the Top Cap.
2. Raise the bed of the Ranger. Located at the bottom of the frame is a bracket that holds the side plastic in place. In this bracket is a large hole that you will run the loop end of the strap through. Then run the opposite end of the strap through the loop and pull it tight. The photo below shows how it should look.



3. Now pull the strap up and run them through the buckles sewn into the rear corners of the Top Cap as shown in the photos below.

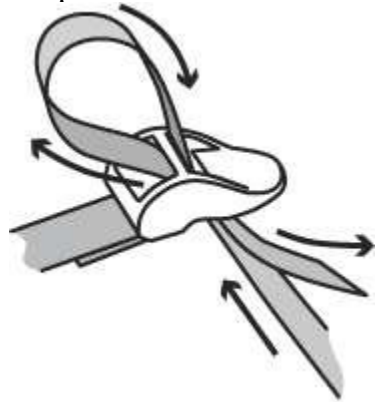

4. Moving to the front of the vehicle you will now need to remove the top front bolt using a 5/16 Allen wrench. Next take the included Allen bolt and first slide the washer followed by two of these spacer tubes over the bolt and screw it back in making sure its plenty tight. Photo below shows how it should look.

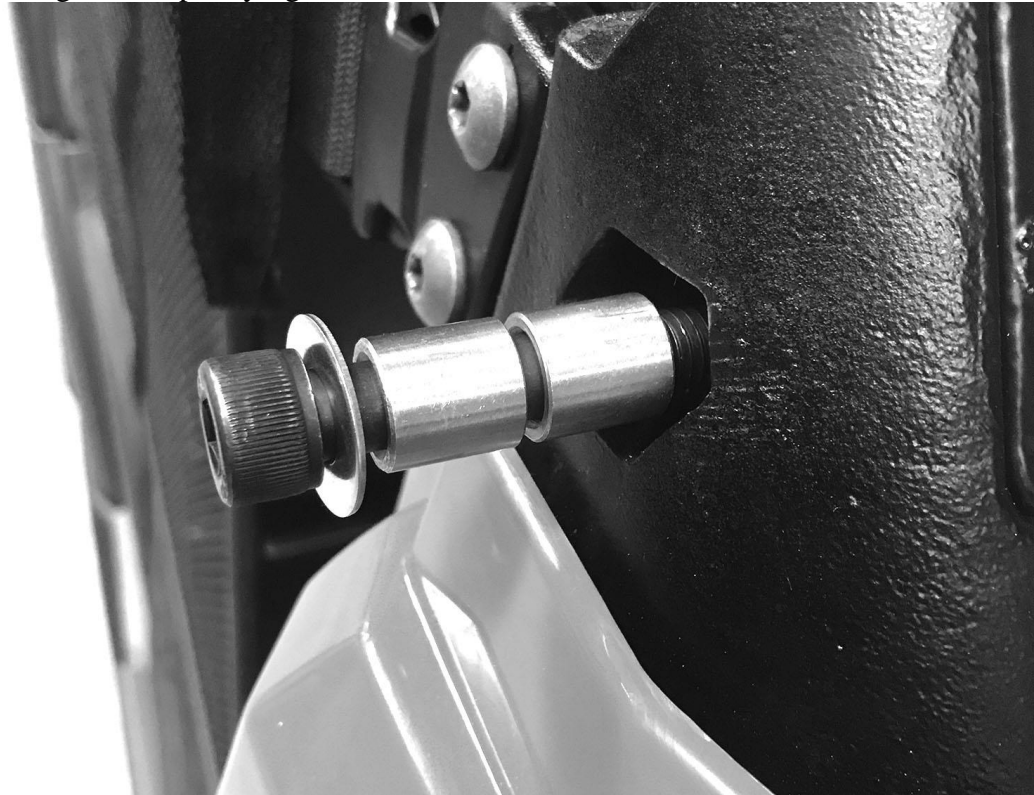

5. Now Take the 25" webbing strap and put the looped end around the bolt so that it is held in place by the washer and can't slip off. Then run the other end through the buckle in the front corner of the Top cap as you did in the rear and pull it tight. Now work your way around the top making sure that it is centered correctly and pulled as tight as possible.
6. Now your enclosure should be complete. With proper care your cab should last for years to come. Enjoy!!!

Return Policy

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly **as it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.

If ordered from Over Armour Offroad please call at 606-845-7439 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Over Armour Offroad without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Over Armour Offroads many distributors', you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

Warranty

To The Owner of this Product:

Thank you for purchasing one of Over Armour Offroad Cab Enclosures, Tops &/or Windshields!
Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.

Thank you,

Over Armour Offroad
www.overarmouroffroad.com