



UTILITY VEHICLE UTILITY RACK- MULTI FIT

MODEL: UVUR10MF

⚠ WARNING

READ ALL INSTRUCTIONS BEFORE INSTALLING UTILITY RACK.

NOTE: Failure to read instructions before use could result in injury or death.

Instructions for Installation and Use:

Contents: See Fig. 1

- 88-flat washers
- 36-5/16" locknuts
- 8-1/4" locknuts
- 8-1/4" x 1 1/4" lag screws.
- 6-5/16" x 2" eyebolts
- 8-1/4" x 1 1/4" bolts
- 14-5/16" x 2 1/2" bolts
- 16-5/16" x 2" bolts
- 1-set of canoe straps



FIG. 1

Contents Continued: See Fig. 1A

- (A) 4-bent upright arms
- (B) 5-22" splices
- (C) 2-12" splices
- (D) 4-upright legs
- (E) 4-load stops
- (F) 6-horizontal cross bars
- (G) 2-Extension Angles
- (H) 2-Extension Cross Bars
- (17 3/4)

G

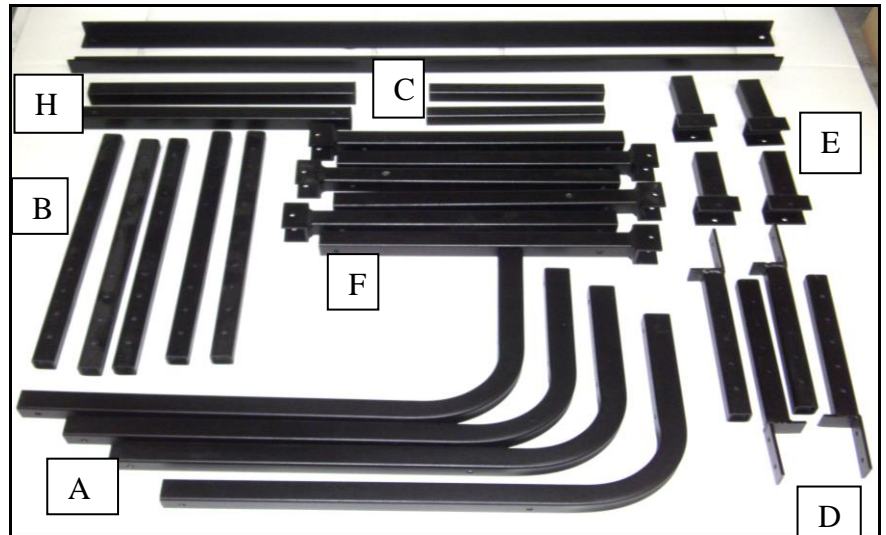


FIG. 1A

STEP 1-MEASURE THE INSIDE OF THE CARGO BOX FROM FRONT TO BACK. ASSEMBLE THE 2 BENT UPRIGHT ARMS (A) USING EITHER ONE 22" SPLICE (B) OR 12" SPLICE (C) TO PROVIDE PROPER WIDTH OF CARGO BOX. SECURE USING TWO 5/16" BOLTS, FLAT WASHERS AND LOCKNUTS. REPEAT FOR OTHER SIDE. **SEE FIG. 2**

STEP 2-MEASURE FROM THE TOP OF THE CARGO BOX TO THE TOP OF EACH ROLL BAR OR ROOF. ADD 3" TO MEASUREMENT OF EXTENSION. SLIDE UPRIGHT LEGS INTO UPRIGHT ARMS AND SELECT HOLE IN LEG THAT WILL GIVE DESIRED HEIGHT. SECURE WITH 5/16" BOLTS, FLAT WASHERS AND LOCKNUTS.

****NOTE**** THE LONG SIDE OF THE ANGLE ON LEGS SHOULD BE ORIENTED TO BE LOCATED INSIDE OF CARGO BOX WITH SHORT SIDE OF ANGLE RESTING ON TOP OF CARGO BOX. ******

REPEAT FOR OTHER SIDE. **SEE FIG. 2**



FIG. 2

STEP 3-MEASURE THE INSIDE OF THE CARGO BOX FROM SIDE TO SIDE. ASSEMBLE 2 OF THE HORIZONTAL CROSS BARS (F) WITH ONE 22" SPLICE (B) USING TWO 5/16" X 2" BOLTS, FLAT WASHERS AND LOCKNUTS. BE SURE TO SELECT HOLES IN SPLICES THAT WILL GIVE YOU THE REQUIRED MEASUREMENT. REPEAT PROCESS WITH OTHER CROSS BARS AND SPLICES.

****NOTE**** IF THE PRE-DRILLED HOLES DO NOT GIVE YOU THE EXACT MEASUREMENT NEEDED, SECURE 1 CROSS BAR TO SPLICE IN EXISTING HOLE, SLIDE OTHER CROSS BAR ONTO SPLICE UNTIL DESIRED MEASUREMENT IS REACHED. MARK SPLICE WITH PENCIL, REMOVE CROSSBAR AND DRILL MARK WITH A 5/16" DRILL BIT. **** SEE FIG. 3-NEXT PAGE**

STEP 4-SECURE A 5/16" EYEBOLT TO EACH OF THE LOAD STOPS (E). **SEE FIG. 3-NEXT PAGE**

STEP 5-ATTACH THE 4 LOAD STOPS (E) TO 2 OF THE CROSS BAR ASSEMBLIES USING FOUR 5/16" X 2 1/2" BOLTS, FLAT WASHERS AND LOCKNUTS.

****NOTE**** THE THIRD CROSSBAR ASSEMBLY ATTACHES TO THE FRONT OF THE SUPPORT ARMS AND DOES NOT REQUIRE LOAD STOPS. **** SEE FIG. 3-NEXT PAGE**

PAGE 3 OF 5

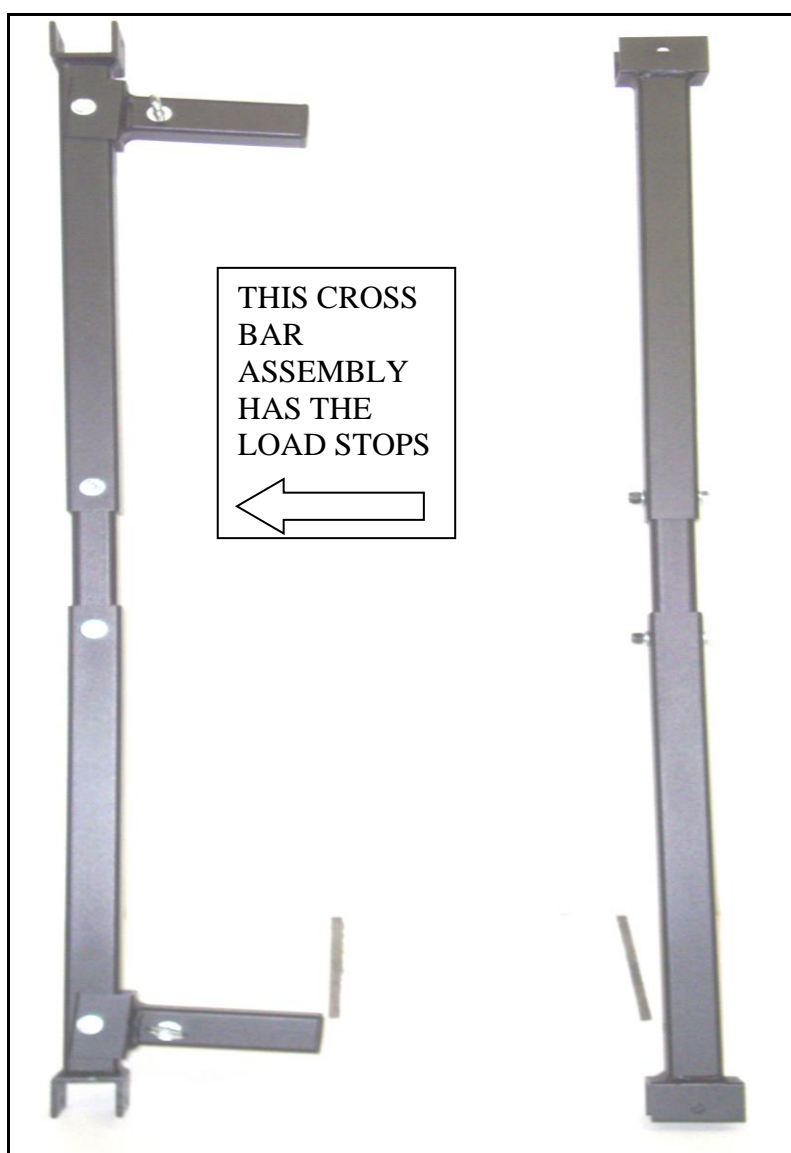


FIG. 3

STEP 6-ATTACH THE 3 CROSS MEMBER ASSEMBLIES TO THE SIDE ASSEMBLIES USING 5/16" X 2 1/2" BOLTS, FLAT WASHER AND LOCKNUTS.

****NOTE**** THE 2 CROSS MEMBER ASSEMBLIES THAT HAVE LOAD STOPS INSTALLED ARE TO BE USED ON THE TOP OF THE RACK. **SEE FIG. 4**

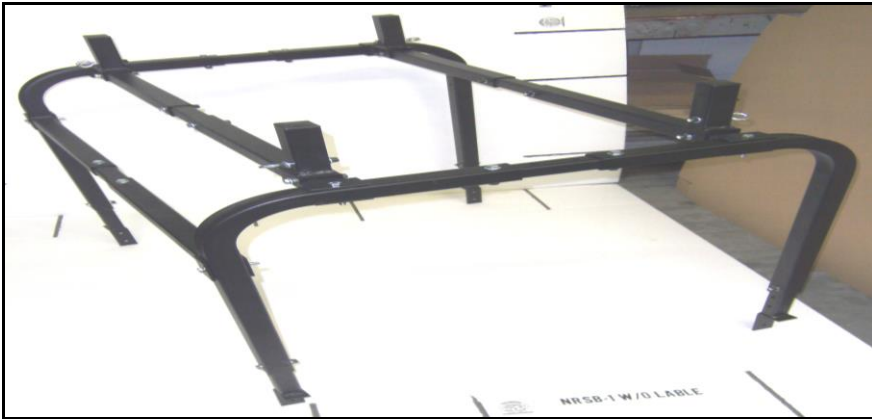


FIG. 4



FIG. 5

STEP 7-ATTACH 1 OF THE 17 ¾" EXTENSION CROSS BARS TO 1 OF THE EXTENSION ANGLES USING A 5/16" EYEBOLT AND LOCKNUT. (NO FLAT WASHERS WILL BE USED) REPEAT WITH REMAINING EXTENSION COMPONENTS. SLIDE A 22" **OR** A 12" SPLICE INTO 1 OF THE EXTENSION CROSS BARS AND SECURE IT WITH A 5/16" X 2" BOLT, FLAT WASHERS AND LOCKNUTS. **SEE FIG. 5**

STEP 8-WITH THE HELP OF A FRIEND, PLACE THE EXTENSION ASSEMBLY ON TOP OF THE ASSEMBLED RACK & ALIGN HOLES WITH THE BACK EDGE OF THE REAR CROSS MEMBER AND MARK HOLES FOR DRILLING. REMOVE THE EXTENSION AND DRILL MARKS WITH A 5/16" DRILL BIT. RETURN THE EXTENSION TO THE RACK AND SECURE WITH ONE 5/16" X 2 ½" BOLT, FLAT WASHERS AND LOCKNUTS. **SEE FIG. 6** ONCE THE EXTENSION IS ATTACHED TO THE DRILL HOLES THROUGH THE EXTENSION ANGLE AND FRONT CROSSBAR AND SECURE WITH 5/16" X 2 ½" BOLTS



FIG. 6

STEP 9-WITH THE HELP OF A FRIEND, PLACE COMPLETE RACK ASSEMBLY ONTO CARGO BOX. MARK HOLES IN UPRIGHT LEGS AND DRILL USING A 1/4" DRILL BIT, SECURE THE RACK TO THE CARGO BED USING EITHER EIGHT 1/4" LAG SCREWS OR EIGHT 1/4" X 1 1/4" BOLTS, FLAT WASHERS AND LOCKNUTS.

****NOTE****BOLTS AND LOCKNUTS ARE RECOMMENDED IF YOU CAN ACCESS THE END OF BOLT TO INSTALL LOCKNUTS. ******

PAGE 5 OF 5

⚠ WARNING : PLEASE READ AND FOLLOW ALL INSTRUCTIONS AND WARNINGS FURNISHED WITH UVUR10MF UTILITY RACK.

⚠ WARNING : MAXIMUM WEIGHT CAPACITY 100 LBS.

⚠ WARNING : NEVER ALLOW ANYONE TO SIT OR CLIMB ON UTILITY RACK AT ANY TIME.

⚠ WARNING : NEVER USE UTILITY RACK FOR ANY PURPOSE OTHER THAN INTENDED USE.

⚠ WARNING : NEVER TRANSPORT A LOAD ON UTILITY RACK WITHOUT IT BEING PROPERLY SECURED.

For more information about this or other products, contact us at:

Great Day, Inc.

604 Kimbrough Dr. * Tallulah, LA 71282 * (866) 649-1918 * www.greatdayinc.com